

GARMIN[™]

nüvi[®] 705 series

 
quick start manual



Your nüvi unit



See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

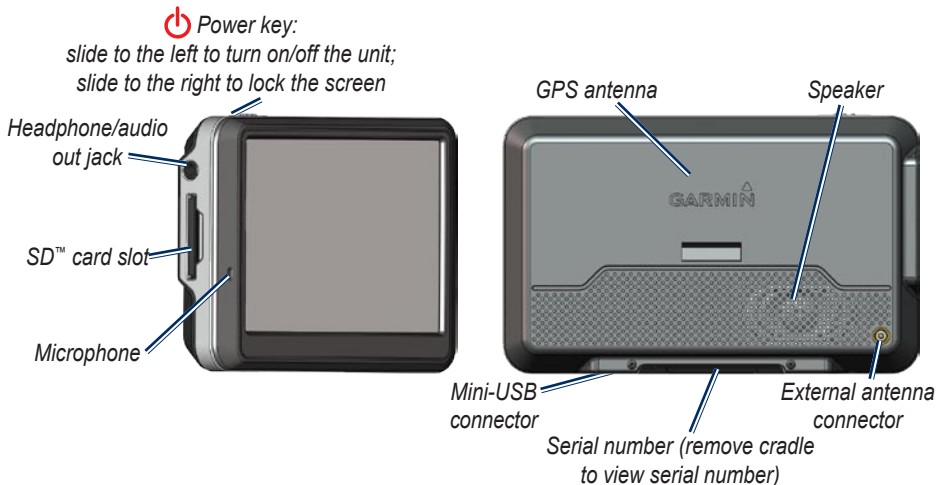


WARNING: This product contains a lithium-ion battery. To prevent damage, remove the unit from the vehicle when exiting or store it out of direct sunlight.

Before mounting the nüvi, see the *Important Safety and Product Information* for information about laws pertaining to windshield mounting.

Garmin® and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. SD™ is a trademark of the SD Card Association.

Step 1: Mount the nüvi

 1. Remove the clear plastic from the suction cup. Clean and dry your windshield and the suction cup with a lint-free cloth.
2. Place the suction cup on the windshield.
3. Plug the vehicle power cable into the power connector on the right side of the cradle.

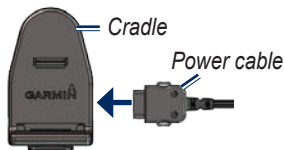


4. Snap the cradle onto the suction cup arm.




5. Flip the lever back, toward the windshield.
6. Fit the bottom of your nüvi into the cradle.

 7. Tilt the nüvi back until it snaps into place.

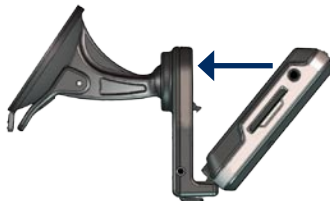


8. Plug the other end of the vehicle power cable into a power outlet in your vehicle. Your unit should turn on automatically if it is plugged in and your vehicle is running.
9. If you are using a traffic receiver in Europe, secure the antenna on the traffic receiver to the windshield using the suction cups. (The traffic receiver is included in some nüvi packages.)

Step 2: Configure the nüvi

To turn on your nüvi, slide the  **Power** key to the left. Follow the on-screen instructions.

Step 3: Acquire Satellites

1. Go outdoors to an open area, out of garages, and away from tall buildings.
2. Stop your vehicle, and turn on the nüvi.

Acquiring satellite signals may take a few minutes. The  bars indicate GPS satellite strength. When one bar is green, the nüvi has acquired satellite signals. Now you can select a destination and navigate to it.

Step 4: Use the nüvi



- 1 GPS satellite strength.
- 2 Bluetooth® technology status.
- 3 Battery status.
- 4 Current time.
- 5 Touch to find a destination.
- 6 Touch to view the map.
- 7 Touch to make a call when connected to a compatible mobile phone (not available on nüvi 755).

- 8 Touch to adjust the volume.
- 9 Touch to use the tools such as media players, settings, and Help.

Finding Points of Interest

1. Touch **Where to?** > **Points of Interest**.
2. Select a category and a subcategory.
3. Select a destination, and touch **Go!**.

To enter letters contained in the name, touch **Where to?** > **Points of Interest** > **Spell Name**.

To search for a location in a different area, touch **Where to?** > **Near**.

Adding a Stop

1. With a route active, touch **Menu** > **Where to?**
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as via point** to add this stop before your destination.



TIP: To add more than one stop, edit the current route. Touch **Where to?** > **Custom Routes**.

Following Your Route

Your route is marked with a magenta line. As you travel, your nüvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your nüvi recalculates the route and provides new directions.

 
Touch and drag the map to view a different area of the map. A speed limit icon could appear as you travel on major roadways.




- 1 Touch to view the Next Turn page or the Lane Assist page (if available).




- 2 Touch to view the Turn List page.

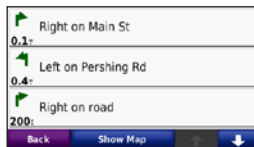

 - 3 Touch to zoom in and out.
- 4 Touch to view the Where Am I? page.

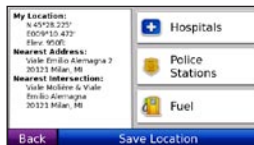

 - 5 Touch to view the Trip Computer page.

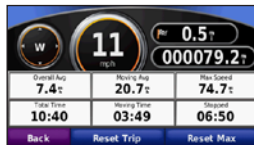

- 6 Touch to return to the Menu page.
- 7 Touch to change the data displayed here.

Using FM TMC Traffic



NOTE: Garmin is not responsible for the accuracy of the traffic information.

The FM traffic receiver, which is integrated in the vehicle power cable, is included in some nüvi packages.

The traffic receiver and the nüvi must be in data range of an FM station transmitting TMC (Traffic Message Channel) data to receive traffic information. For information about traffic receivers and coverage areas, go to www.garmin.com/traffic.




NOTE: Heated (metallized) windows could degrade the performance of the traffic receiver.



NOTE: You do not need to activate the subscription included with your FM traffic receiver (if it came with one). The subscription activates automatically after your nüvi receives traffic signals from the pay service provider.

When calculating your route, the nüvi examines the current traffic and automatically optimizes the route for the

shortest time. You might still be routed through traffic if no alternative roads exist. If a severe traffic delay occurs on your route while you are navigating, the nüvi automatically recalculates the route.

When you receive traffic information, a  traffic icon appears in the top left corner of the Map page. The traffic icon changes color to indicate the severity of traffic conditions on your route or the road you are currently traveling. Touch the icon to view the Traffic menu.

Viewing Advertisements

In North America, if your nüvi package includes a traffic receiver, you will receive advertisements and coupons. Touch the advertisement on the screen to search for the nearest location related to that advertisement.



CAUTION: Do not attempt to write down the coupon codes while driving.

Making Hands-Free Phone Calls

Bluetooth wireless technology is not available on nüvi 755 models. Using Bluetooth wireless technology, your nüvi can wirelessly connect to your mobile phone to become a hands-free device. To pair and connect, your phone and your nüvi must be turned on and be within 10 meters of each other.

Pairing the nüvi with Your Mobile Phone

1. Confirm that your phone is supported by the nüvi. (Go to www.garmin.com/bluetooth.)
2. From the Menu page, touch **Tools** > **Settings** > **Bluetooth** > **Add**.
3. Enable the Bluetooth component on your phone and enable Find Me/Discoverable/Visible mode. These settings might be in a Bluetooth, a Connections, or a Hands-free menu.
4. Touch **OK** on the nüvi.
5. Select your phone, and touch **OK**.

6. Enter the nüvi Bluetooth PIN (**1234**) in your phone.

Receiving a Call

When you get a call, the Incoming Call window opens. Touch **Answer** to answer the call. The internal microphone is in the front of the nüvi. Speak normally.


Making a Call

When your phone is connected to your nüvi, you are ready to make phone calls. Touch **Phone** to access the Phone menu.



NOTE: Not all phones support all features of the nüvi Phone menu.

Calling a Number

1. Touch **Phone** > **Dial**.
2. Enter the number, and touch **Dial**.
3. To end the call, touch  > **End Call**.

Using the FM Transmitter

Before using the FM transmitter in your area, see the FM transmitter legal notice in the owner's manual.

You can listen to your nüvi through the speakers in your vehicle. From the Menu page, select **Volume > Audio Output > FM Transmitter > OK**. Select an FM channel with a lot of static, and select the same channel on the nüvi.

Loading Files on Your nüvi

1. Insert a SD card (optional).
2. Connect the USB cable.
3. Transfer files to the nüvi.
4. Eject and unplug the USB cable.

Listening to MP3 Files

1. Touch **Tools > Media Player**.
2. Touch **Source** to open the MP3 player.
3. Touch **Browse**.
4. Touch a category.
5. Touch **Play All**.


Locking Your nüvi

1. Touch **Tools > Settings > Security**.
2. Touch the button below **Garmin Lock**.
3. Enter a 4-digit PIN and drive to a security location.



NOTE: If you forget your PIN and your security location, you must send your nüvi and valid product registration or proof of purchase to Garmin to get your nüvi unlocked.

Resetting the nüvi

If the nüvi screen stops functioning, turn the nüvi off and on again. If this does not help, slide the  **Power** key to the left and hold it for 8 seconds. Turn the nüvi back on. The nüvi should operate normally.

More Information

For more information about your nüvi, touch **Tools > Help**. Download the latest version of the owner's manual from www.garmin.com. For information about accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.