

StreetPilot® 2720

quick reference guide



Mounting Your 2720

1. Align the power plug on the vehicle adapter to the connector and slide the plug into the connector until fully seated, as shown to the right.
2. Slide the locking lever on the mounting base to the left, in the unlocked position.
3. Slide the bottom of the StreetPilot into the mounting base until it clicks into place.
4. Slide the locking lever to the right.
5. Plug the power adapter into an available cigarette lighter receptacle in your vehicle. Route the cable so it does not interfere with vehicle operation.
6. Flip the power switch on the side of the StreetPilot down.



Finding Your Destination

- 1 Touch Where To?
- 2 Touch Food, Hotel....
- 3 Touch Food & Drink.
- 4 Touch a food category.
- 5 Touch the place.
- 6 Touch Go To.
- 7 Enjoy the route!

Following Your Route

Follow the route to your destination using the map. As you travel, your StreetPilot guides you to your destination with voice prompts, arrows, and directions along the top of the map. If you depart from the original route, your StreetPilot recalculates the route and provides new route instructions.

- 1 Read the driving directions along the top of the map.
- 2 Your route is marked with a magenta line.
- 3 Follow the arrows.
- 4 A checkered flag marks your destination.

Warning: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the 2720 installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

Viewing the Map Page

 


View Map

From the Menu page, touch **View Map** to open the map, or press the **MAP** key. Touch an area of the map to see additional information, as shown below. The position icon ▲ shows your current location.

While navigating a route, touch the green text bar to open the Turn List.

Touch — to zoom out.

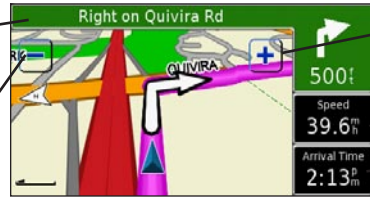

Touch + to zoom in.

Touch the **Speed** or **Arrival** data field to open the Trip Computer.

Map while Navigating a Route



Turn List



Trip Computer

 
Setting a Home Location

You can set a Home Location for the place you return to most often. Press the **FIND** key.

① Touch **Go Home**.

② Select an option.

③ Touch **Save Home**.

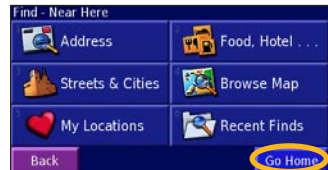

Going Home

 
After you set your Home Location, press the **FIND** key and touch **Go Home**.

Saving Places You Find


① Touch the place you want to save.



② Touch **Advanced**.

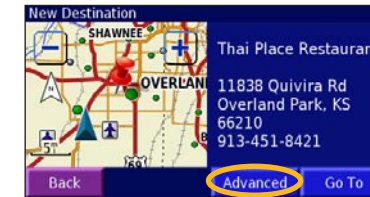

③ Touch **Add As Favorite**.

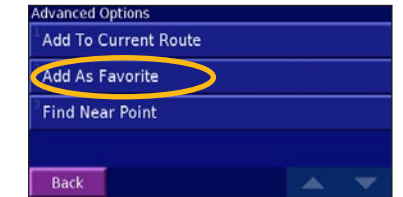 

Finding Saved Places

Your saved places are stored in the Favorites category in My Locations. Press the **FIND** key > **My Locations** > **Favorites**.

Editing or Deleting a Saved Place

Press the **MENU** key. Touch **Tools** > **My Data** > **Favorites** > **Edit/Review Favorites** or **Delete Favorites**.

Adjusting the Backlight Brightness

Press the **MENU** key. Touch **Settings** > **Screen** > **Brightness** > **Manual Brightness**. Touch the — to decrease the brightness of the backlight or + to increase it. Select **Auto** for automatic brightness adjustment.



Adjusting the Volume

Press the **MENU** key and then touch **Volume**. Touch + and — to adjust the volume of the speaker.

Using the Unit Keys

- ① **FIND**—opens the Find menu.
- ② **MENU**—opens the Menu page.
- ③ **MAP**—opens the Map page.
- ④ **SPEAK**—announces voice directions.
- ⑤ **Power** switch—turns on and off the unit.
- ⑥ **Infrared (IR)** window—receives remote control signals.

