

© 2006 Garmin Ltd. or its subsidiaries
 Garmin® is a registered trademark, and zūmo™ is a trademark of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.

Part Number 190-00697-01 Rev. A
 October 2006 Printed in Taiwan

zūmo™ 500/550



the personal motorcycle navigator



Important Information

This guide provides short instructions for various operations of your zūmo. Fold and keep this guide in your carrying case pocket.

See the *Important Safety and Product Information* guide for product warnings and legal information.

WARNING: Do not leave your GPS unit exposed in an unattended vehicle on a hot day. To prevent damage, remove it from the vehicle; or store it out of direct sunlight, such as in the glove box. See the specifications in the owner's manual.

CAUTION: To prevent damage to the touch screen, do not place sharp objects in the carrying case pocket.

Specifications

Water resistance: IPX7 waterproof (submersible in one meter of water for up to 30 minutes)

Power: 12/24 VDC


Battery: Rechargeable, replaceable lithium-ion battery.

Battery life: Fully charged, up to 4 hours

For more information, refer to the owner's manual on disk.

Looking at Your zūmo

- A** Power button
- B** Zoom in, raise volume, or increase brightness.
- C** Zoom out, lower volume, or decrease brightness.
- D** Page button—scroll to the Map, Trip Information, Media Player, and Phone Menu pages. Press and hold to adjust brightness.
- E** Speak button—press to adjust volume level. Press and hold to announce voice directions.

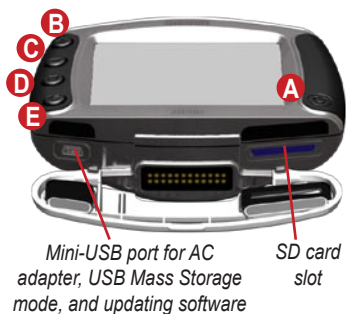

Resetting Your zūmo


If your unit freezes up, press and hold the **Power** button and press **+**.

Configuring Your zūmo

To turn on your zūmo, press and hold the **Power** button. Follow the on-screen instructions.

Acquiring Satellites

Go outdoors to an open area, away from tall buildings and trees. Turn on the zūmo. Acquiring satellite signals may take a few minutes.

 bars indicate GPS satellite strength. When the bars are green, your zūmo has acquired satellite signals, and you can start navigating.

Charging the Battery

To charge your zūmo, connect it to a power source using the 12/24 VDC cable or AC adapter.

Calibrating the Touch Screen

If the touch screen is not responding properly, calibrate the touch screen. Turn the unit off. Press and hold the **Power** button for about one minute until the Calibration screen appears. Follow the on-screen instructions.

Using the Menu Page

- A** Displays satellite strength.
- B** Displays phone and headset connection status.
- C** Displays battery status.
- D** Touch to find a destination.
- E** Touch to view the map.
- F** Touch to open the Phone menu (when connected to a mobile phone with Bluetooth® wireless technology).
- G** Touch to view traffic incidents (requires antenna or receiver and subscription).



- H** Touch to open the Media Player. You can listen to MP3 files and XM radio (requires antenna and subscription).
- I** Touch to adjust the zūmo's settings.

Following Your Route



Touch to zoom the map in and out.

Touch to open the Menu page.



Touch to open the Trip Information page.

Touch to preview turns in the route.

Touch to save your current location.


Touch to open the Next Turn page.

Using Traffic Features

Using an FM TMC traffic receiver or an XM smart antenna, you can receive traffic data on your zūmo. From the Map page, touch  or  when there is a traffic incident on your current route or road. Select an item to view details, and then touch **Avoid**.


For more information about zūmo accessories and subscriptions, go to www.garmin.com/products/zumo.

Using the Fuel Gauge

1. On the Map page, touch **Speed** to open the Trip Information page.
2. Touch **Reset** > **Miles/Kilometers Per Tank**.
3. Enter amount, and touch **Done**.
4. A message appears when you have 30 miles (~48.3 km) remaining.
5. Touch  to search for a nearby fuel station.
6. To reset, go to the Trip Information page, and touch the gauge > **Yes**.




Locking Your zūmo

1. On the Menu page, touch  > **System** > **Garmin Lock**.
2. Touch **OK**, and enter a four-digit PIN.
3. Re-enter your four-digit PIN.
4. Touch **OK**.
5. Drive to a security location, and touch **Set**.
6. Each time you turn on the zūmo, enter the four-digit PIN or drive to the security location.
7. If necessary, enter the zūmo's Bluetooth PIN (**1234**) in your phone.
8. The next time you turn on your zūmo, it automatically tries to pair with the last device with which it was connected.

Using Hands-Free Features

Bluetooth wireless technology establishes a wireless link between devices, such as a mobile phone, wireless headset, and the zūmo.

To pair using the zūmo settings:

1. Confirm that the device is compatible with your zūmo (www.garmin.com/bluetooth).
2. On the zūmo's Menu page, touch  > **Bluetooth**.
3. Touch the **Add/Change** button next to **Connect Phone** or **Connect Headset**.