




eTrex[®] Vista

personal navigator[™]

owner's
manual
and
reference
guide

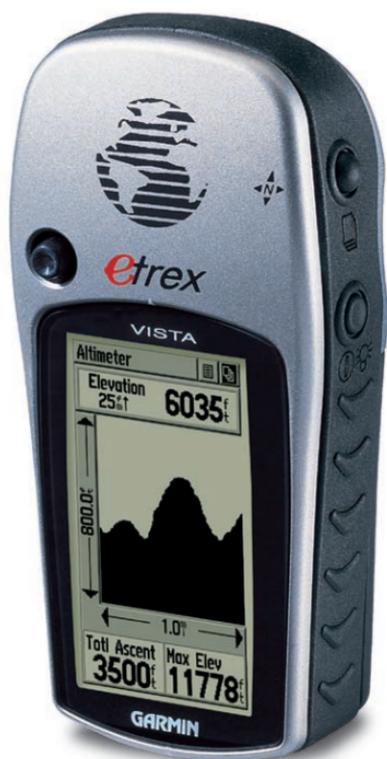

© 2001 GARMIN Corporation

GARMIN International, Inc.
1200 E 151st Street, Olathe, Kansas 66062 U.S.A.
Tel. 913/397.8200
Fax. 913/397.8282

GARMIN (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9AQ U.K.
Tel. 44/1794.519944
Fax. 44/1794.519222

GARMIN Corp.
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel. 886/2.2642.9199
Fax. 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without prior written consent of GARMIN Corporation. GARMIN Corporation hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual contains the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual is strictly prohibited.

Information in this manual is subject to change without notice. GARMIN Corporation reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes. Visit the GARMIN website (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other GARMIN products.

GARMIN, eTrex, AutoLocate, and TracBack are registered trademarks, and MapSource and Personal Navigator are trademarks of GARMIN Corporation and may not be used without the express permission of GARMIN Corporation.

About This Manual

Thank you for choosing the GARMIN eTrex Vista. To get the most from your new eTrex Vista, take time to read through this owner's manual in order to understand all of the operating features. This manual is organized into four sections.

The **Introduction** section provides FCC and safety information and the Table of Contents.

The **Getting Started** section introduces you to the eTrex Vista features, main operating pages and basic navigation methods.

The **Reference** section provides details about using the features of the eTrex Vista according to topic. The explanations for each feature in this section are divided into: (1) An overview that discusses the feature and how it functions and (2) A detailed Step-by-Step instruction for using the feature.

Reading the overview may be all that you require to operate features, however, the Step-by-Step instructions are available, if needed.

The **Appendices** contain information on items such as Accessories, Specifications, a Troubleshooting Guide, and an Index by Subject.

Standard Package Contents:

- 1 eTrex Vista Unit
- 1 Carry Lanyard
- 1 Owner's Manual
- 1 Quick Start Guide
- 1 PC Interface Cable

FCC Compliance Statement

This device complies with Part 15 of the FCC limits for Class B digital devices. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular instance. If this equipment does cause harmful interference to other equipment, try to correct the problem by relocating the equipment.

Consult an authorized GARMIN dealer or other qualified service technician if the problem cannot be corrected.

Operation is subject to the following conditions: (1) This device cannot cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The eTrex Vista does not contain any user-serviceable parts. Repairs should be made only by an authorized GARMIN service center. Unauthorized repairs can void the warranty.

Warnings and Precautions

CAUTION: The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The system is subject to changes which could affect the accuracy and performance of all GPS equipment. Although the eTrex Vista is a precision electronic NAVigation AID (NAVAID), any NAVAID can be misused or misinterpreted and, therefore, become unsafe.

CAUTION: IT IS THE USER'S RESPONSIBILITY TO USE THIS PRODUCT PRUDENTLY. THIS PRODUCT IS INTENDED TO BE USED ONLY AS A TRAVEL AID AND MUST NOT BE USED FOR ANY PURPOSE REQUIRING PRECISE MEASUREMENT OF DIRECTION, DISTANCE, LOCATION, OR TOPOGRAPHY. THIS PRODUCT SHOULD NOT BE USED AS AN AID TO DETERMINE GROUND PROXIMITY FOR AIRCRAFT NAVIGATION.

MAP DATA INFORMATION: One of the goals of GARMIN is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify as required in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some degree. This is particularly true outside the United States, where complete and accurate digital data is either not available or prohibitively expensive.

WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of the eTrex Vista to secure the GPS unit so that it will not interfere with the vehicle's operating controls, obstruct the driver's view of driving conditions, or cause damage or personal injury in the event of an accident. Do not mount the eTrex Vista over air bag panels or in the field of air bag deployment. Air bag expand with a rapid force that can propel objects in their path toward the driver or passengers causing possible injury. Refer to air bag safety precautions contained in the vehicle owner's manual. Do not mount the eTrex Vista in a place where the driver or passengers are likely to impact it in an accident or collision. The mounting hardware provided by GARMIN is not warranted against collision damage or the consequences thereof.

WARNING: When used in vehicles, it is the sole responsibility of the driver of the vehicle to operate the vehicle in a safe manner, maintain full surveillance of all driving conditions at all times, and not become distracted by the eTrex Vista to the exclusion of safe operating practices. It is unsafe to operate the controls of the eTrex Vista while you are driving. Failure by the driver of a vehicle equipped with an eTrex to pay full attention to operation of the vehicle and road conditions while the vehicle is in motion could result in an accident or collision with property damage and personal injury.

Warnings and Precautions

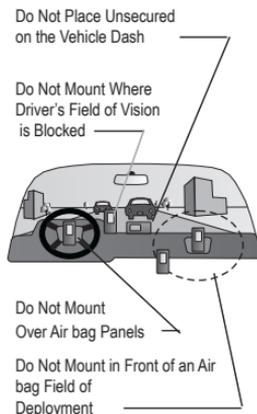


Table of Contents

Section One - Introduction

About This Manual.....	i
FCC Compliance Statement.....	ii
Warnings and Precautions.....	ii-iii
Table of Contents.....	iv

Section Two - Getting Started

Setup, Features, & Basic Navigation.....	1
Features and Button Function.....	2
Battery Installation.....	3
Starting-Up.....	3
Backlighting and Contrast.....	4
Map Data Setup.....	4
Page Basics: The Main Pages.....	5-11
Setting The Correct Time.....	11
Basic Navigation.....	12-14

Section Three - Reference

The Satellite Page.....	15-16
Navigation Methods.....	17
The Map Page.....	18-24
Map Page Options.....	19-24
Panning the Map.....	20
Stop Navigation.....	21
Navigation Status.....	21
Data Fields.....	21-22
Map Page Setup.....	23-24
The Navigation Page.....	25-27
Navigation Page Options.....	25-27
Bearing/Course Pointer.....	25
Data Fields.....	26
Electronic Compass.....	27
The Altimeter Page.....	28-31
Altimeter Page Options.....	29-31
View Elevation/Pressure Plots.....	29
View Points.....	30
Calibrate Altimeter.....	30
Data Fields.....	31
The Trip Computer Page.....	32
The Main Menu.....	33
Marking Your Location as a Waypoint.....	34

Creating a Waypoint.....	35
Moving a Waypoint.....	35
Projecting a Waypoint.....	36
Editing Waypoints.....	36
Saving as a Waypoint.....	36
The Find Menu.....	37-43
Finding a Waypoint.....	38
Finding a Favorite.....	38-39
Finding a City.....	39
Finding an Exit.....	40
Finding a Point of Interest.....	41-42
Finding an Address or Intersection.....	42-43
Using a Goto.....	44
Routes.....	45-50
Creating and Using A Route.....	45
Editing a Route.....	46-47
Adding or Editing from the Route Map Page.....	48-49
Navigating a Route.....	49
Data Fields.....	50
Tracks.....	51-52
The Setup Pages.....	53-57
Time Page.....	53
Units Page.....	54
Display Page.....	55
Heading Page.....	55
Interface Page.....	56
System Page.....	57
The Accessory Pages.....	58-60
Sun and Moon Page.....	58
Calendar Page.....	59
Hunt and Fish Page.....	60

Section Four - Appendices

Appendix A: Specifications.....	61
Appendix B: Time Offset Chart.....	62
Appendix C: Accessories.....	63
Appendix D: Wiring Diagram.....	64
Appendix E: Troubleshooting.....	65
Appendix F: Index.....	66-67
Appendix G: Warranty.....	68

Before you begin to explore the eTrex Vista's operating features, you will want to follow these "Getting Started" instructions to prepare it for operation by installing batteries, adjusting the screen contrast, loading optional GARMIN MapSource® mapping data, and setting the correct time for your current location.

The operating features of the unit are structured to be accessed and activated by pressing buttons on the unit which is explained on the following page.

The six Main Pages are your primary access to operating the eTrex Vista. Each page provides either a basic navigation function or access to features which enhance navigation or customize the unit's operation.

This "Getting Started" section will introduce you to the Main Pages and how they are structured. You will also be shown how to perform basic navigation techniques to help you start using your eTrex Vista immediately.

Detailed instructions on using the eTrex Vista's features and their options are contained in the "Reference" section.

Features include:

Storage for 500 Waypoints with name and graphic symbol.

An automatic Track Log with storage capability for 10 Tracks with 250 points each.

Route building capability, with storage for 20 Routes with 50 Waypoints each.

A Trip Computer for displaying a variety of navigation data such as speed, ETA, ETE, heading, odometer, etc.

An Elevation Computer for displaying total ascent/descent, average ascent/descent, maximum ascent/descent, 12 hour pressure trend, and maximum/minimum elevation.

A Find Feature for locating Waypoints, Cities, Interstate Exits, Points of Interest, Street Addresses and Intersections.*

24 MB of detailed map data storage, allowing transfer from GARMIN MapSource CD-ROM's.

Wide Area Augmentation System (WAAS) capability.**

Setup, Features, and Basic Navigation

** Points of Interest, Address, and Intersection data must be transferred to the unit using a GARMIN MapSource CD-ROM. See pages 4 and 63 for more information.*

**** About WAAS**

Because the Wide Area Augmentation System (WAAS) is currently under development and is not fully supported by geo-stationary satellites, effective use of the WAAS feature may be limited by your geographic location in relation to those satellites now in service.

There are two WAAS satellites in service in geo-stationary orbit above the Equator; one over the Atlantic Ocean and one over the Pacific Ocean.

Currently, WAAS satellite signal reception requires an absolute clear view of the sky and works best when there are no nearby obstructions such as buildings, mountains, etc. In fact, you may not be able to receive or easily maintain a WAAS satellite signal until full satellite support for this program is complete.

Not enabling WAAS when you cannot receive a signal will speed unit map drawing and conserve battery power.

See page 57 for enabling WAAS and satellite reception techniques.

Features and Button Function



The **CLICK STICK** (Five Position Switch)

- Press In and release to enter highlighted options and to confirm messages
- Press In and hold to mark your current location as a waypoint
- Move Up/Down or Right/Left to move through lists, highlight fields, on-screen buttons, icons, enter data or move the map panning arrow




The **PAGE** button:

- Press and release to cycle through main pages
- Press and hold to turn the electronic compass On/Off

The **POWER** button:

- Press and hold to turn the unit On/Off
- Press and release to toggle display backlighting On/Off

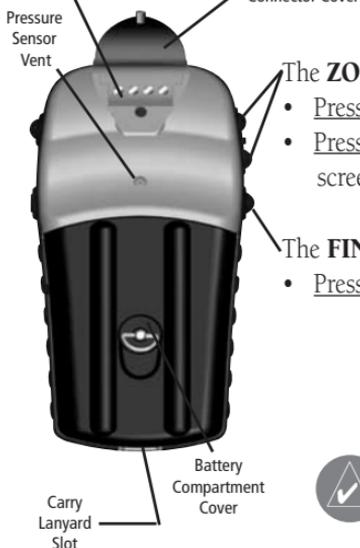

The **ZOOM IN/OUT** buttons:

- Press and hold to Zoom in and out on the Map Page
- Press and hold when on the Satellite Page to adjust the screen contrast

The **FIND** button:

- Press and release to access the Find Menu




NOTE: The eTrex Vista is designed to be held and operated in the left hand, but it can be held and operated using the right hand as well to suit your preference.

Installing the Batteries

The eTrex Vista operates on two "AA" batteries (not included), which are located in the back of the unit. Rechargeable Alkaline, NiCad or Lithium batteries may also be used. Stored data will not be lost when the batteries are removed.

To install batteries:

1. Remove the battery cover on the back of the unit. Turn the D-ring 1/4 turn counter-clockwise & pull away.
2. Insert the batteries observing proper polarity as shown at the right.
3. Reinstall the battery cover by turning the D-ring 1/4 turn clockwise.

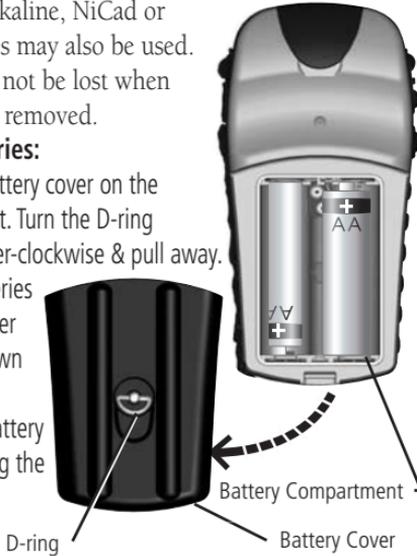

Battery Installation

Important Note:

When replacing batteries, use only new or fully recharged batteries and do not mix Alkaline, NiCad or Lithium batteries.

Remove the batteries from the unit if you don't plan to use it for several months.

Follow the battery manufacturer's instructions for proper care and disposal of used batteries.

In typical use, battery life will vary.

Extensive use of backlighting and/or the electronic compass will significantly reduce battery life.

When using 'Battery Saver' or 'Use With GPS Off' mode when not navigating, batteries can last up to 12 hours.

Starting Up Your eTrex Vista


To start up the eTrex Vista, take the unit outside and find an open area where the built-in antenna has a clear view of the sky. Hold the unit at a comfortable height with the antenna pointing up. Press and hold the **POWER** button to turn the unit on. You will see the Welcome Page. Press the **PAGE** button to acknowledge the copyright and warning messages and move to the Satellite Page.



NOTE: When you use the unit for the first time. It may take up to five minutes to find your location. After that, it will take about 15 to 45 seconds to locate your position.

When a sufficient number of satellites have been located the window at the top of the page will display a "Ready to Navigate" message. If you experience difficulty in tracking satellites, refer to pages 15 and 16 for information about satellite reception and remedies.

Starting Up

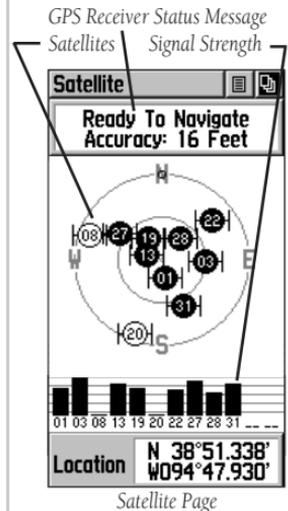

Backlighting and Contrast



Press & Release POWER Button to turn Backlighting On/Off



Use ZOOM IN & OUT Buttons to Adjust Contrast

Map Data Setup



GARMIN MapSource CD-ROMs offer a variety of detailed mapping data and navigation information.

MapSource is also an excellent medium for storage and safety backup of Personal Waypoints, Routes and Saved Tracks.

*See your GARMIN Dealer or visit the GARMIN website at:
www.garmin.com*

for

MapSource Product Information.

Display Backlighting and Contrast Set Up

If lighting conditions make it hard for you to see the display screen, you can adjust the contrast or turn on the backlight.

To turn on the backlighting:

1. Press and release the **POWER** button to turn on the backlight feature from any page on the unit. The backlight will remain on until the set timeout period is completed or the **POWER** button is pressed again. The unit is factory set to timeout 15 seconds after the last button press.

To adjust the screen contrast:

1. Use the **ZOOM IN** or **OUT** buttons to adjust the contrast with the Satellite Page displayed.

Transferring MapSource Map Data


If you have purchased a GARMIN MapSource™ CD-ROM mapping program you may want transfer detailed map data before beginning use, to provide your unit with maximum Find features and mapping capability. The eTrex Vista will accept up to 24 MB of transferred map data which would include MetroGuides, Topographic maps, Roads and Recreation, and WorldMap mapping guides.

Map data transfer requires the use of a PC, a GARMIN MapSource CD-ROM, and the PC Interface Cable with RS232 serial port connector supplied with this unit. Follow detailed instructions for data transfer in the MapSource User's Manual.

Moving from main page to main page

All of the information you need to operate the eTrex Vista can be found on six main pages (or display screens). You can simply press and release the **PAGE** button to cycle through the Satellite Page, Map Page, Navigation Page, Altimeter Page, Trip Computer, and Main Menu Page.

Page Basics: The Main Pages

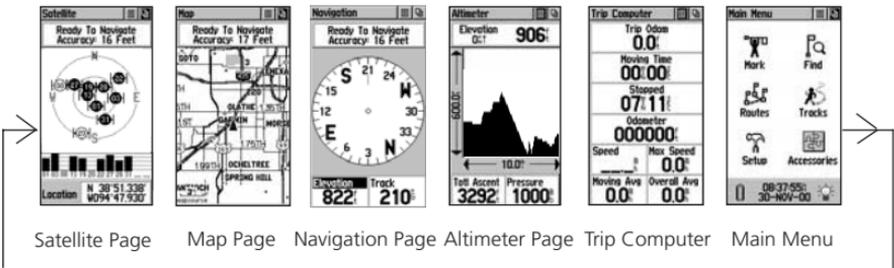

While these six pages provide you with different types of navigation information, they all share common features like Option Menus and a Main Page Menu, both of which are accessed by on-screen buttons. To display these menus, simply highlight the on-screen button and press in on the **CLICK STICK**.




Option Menu Button

Main Page Menu Button




An Option Menu
These menus allow you to access options that provide additional features or customize the unit to your preferences. To exit these and other pop-up type menus, move the **CLICK STICK** to the left or right.

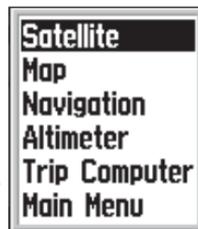

Main Page Menu
Use to go directly to a Main Page and as an alternate to cycling through the Main Pages. Double click on the on-screen button to toggle between two pages.

Page Basics: The Main Pages

Map Page Basics

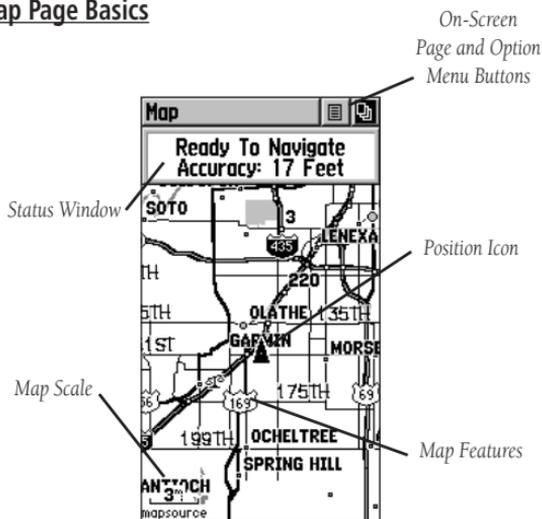


The Map Page displays your present position and direction of movement using a triangular 'Position Icon' that is centered on the map. As you travel the map display leaves a "trail" (track log) of your movements.

The map also displays geographic details such as rivers, lakes, highways, and towns. The map shown above displays a higher level of detail than the basemap provided with the unit (i.e. residential streets, parks, etc.), because GARMIN MapSource data has been downloaded to the unit using a CD-ROM mapping program

To allow you to view the map from different perspectives, the scale can be changed from 120 feet to 500 miles. The **ZOOM IN** and **OUT** buttons on the side of the unit allow you to zoom In or Out on the map. Pressing and holding these buttons causes the scale to change rapidly instead of changing in increments. The **IN** button will show you a larger area with less map details while the **OUT** button displays less area but more map details.

A Status Window at the top of the page provides you with current satellite tracking and position accuracy information.

Navigation Page Basics

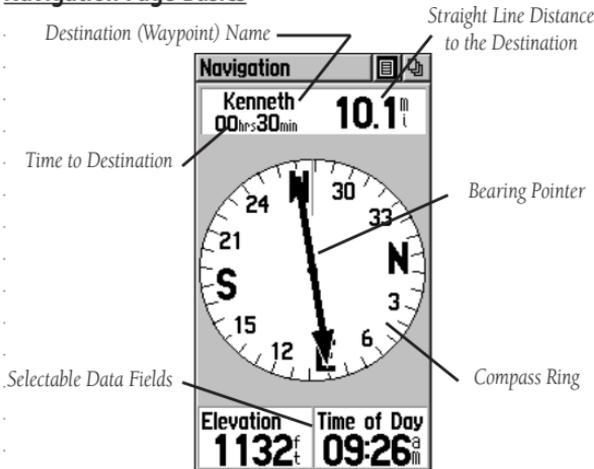


The Navigation Page displays directional information to guide you to a destination. The Status Window at the top of the page shows you the name of your destination, the distance and the time to go. A Bearing Pointer and Compass Ring are displayed to provide you with navigational guidance. Two Data Fields are provided, and can be programmed to display a variety of navigation data.

To navigate, simply follow the Bearing Pointer. The Bearing Pointer will always point directly to the destination, no matter what your current location might be.


When you are not on an active Goto, Track or Route (in other words: not traveling to a recorded destination), the window at the top of the page will display the status of the GPS Receiver and the approximate accuracy of your current position. The Compass Ring will be displayed, indicating your heading while you are moving, but the data fields at the bottom of the page will not display any destination related data, such as Estimated Time of Arrival, etc.

Page Basics: The Main Pages

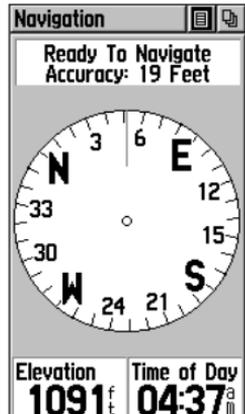


The Navigation Page when not on an active Goto, Track, or Route.

Page Basics: The Main Pages

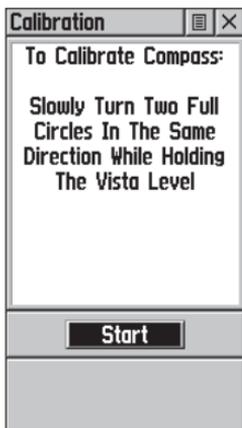

A Compass Icon is displayed on this page and the Map Page to indicate that the Compass is On.

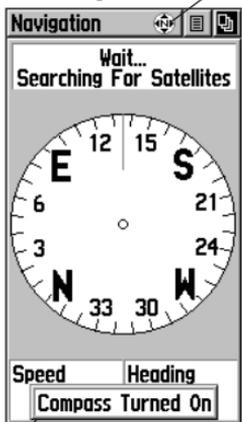

Electronic Compass On/Off Message. Message will turn off after 3 seconds.

The Navigation Page Electronic Compass

The eTrex Vista is equipped with an electronic compass to provide you with direction information when you are stationary. You can also use the compass to perform a basic navigation feature called 'Sight 'N Go'. Before initial use and after changing batteries the compass must be calibrated (outdoors and away from metal objects to prevent significant inaccuracies in the compass readings).

To Calibrate the Electronic Compass:


1. Use the **PAGE** button to access the Navigation Page.
2. Use the **CLICK STICK** to highlight the Options Menu on-screen button and then press it in to display the menu.
3. Highlight the 'Calibrate Compass' option and press in on the **CLICK STICK** to display the Calibration Page.
4. Press in on the **CLICK STICK** to activate the 'Start' button and then follow on-screen directions for holding and turning the unit. A "Just Right", "Too Fast" or "Too Slow" message will appear. Adjust the turning speed as needed.
5. A "Calibration Successful" message will appear when finished. If a "Calibration Failed" message appears, repeat the process using more care in turning the unit.

The Electronic Compass can be turned Off when not required to conserve battery power.

Turning the Electronic Compass On and Off:

1. Press and hold the **PAGE** button at any time to turn the Electronic Compass On or Off. A Compass Icon will be displayed at the top of the Navigation and Map Pages when the Compass is On.
2. When you manually turn the Compass Off, it will stay off until you manually turn it On again. However, when you turn the Compass On, the eTrex Vista will turn the Compass Off and automatically use the GPS receiver to track your heading. The criteria used to switch between the Compass heading and the GPS heading can be customized by accessing the 'Headings' Setup Page. (Refer to page 55)
3. When the Electronic Compass is On, you must hold the eTrex Vista level to get an accurate Compass reading. A 'Hold level' reminder will be displayed if you are not holding the Compass level, or it is not calibrated correctly.

Altimeter Page Basics

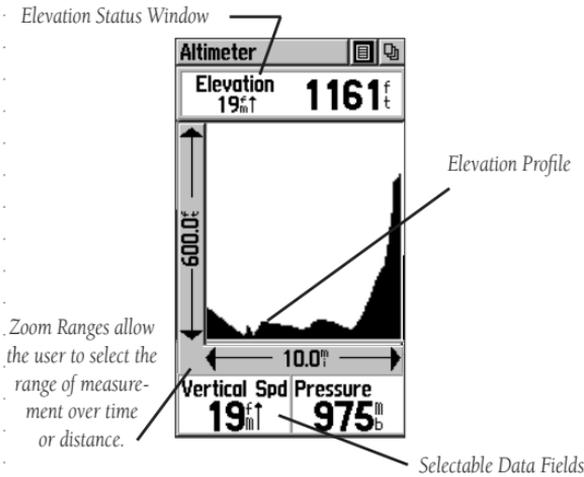

Page Basics: The Main Pages


The Altimeter Page provides the user with the current elevation, rate of ascent/descent, a profile of elevation changes over distance or time, or a profile of pressure changes over time. The page Options Menu allows you to select from a variety of display options such as plotting over time, plotting over distance, zooming ranges of measurement, viewing elevation or pressure points, and resetting data displays. Two user selectable data fields allow you to display a variety of current and recorded pressure and elevation related data.



NOTE: The Altimeter should be calibrated for the greatest accuracy. Refer to page 30 for information on calibrating the Altimeter.

Page Basics: The Main Pages


Trip Computer Page Basics

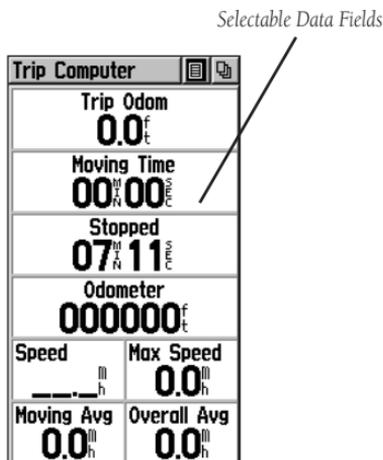

The Trip Computer page displays up to eight different types of navigation data. Each data field is selectable and can contain one of many data information options.

By selecting the information options that you prefer and arranging them in a desired order on the page, you can customize the Trip Computer Page to meet your navigation needs.

The Page Options Menu allows you to reset the Trip Computer data when you are ready to start a new trip.

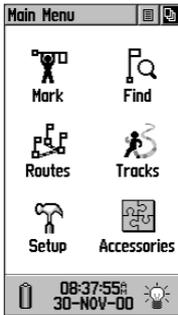


Main Menu Page Basics

The Main Menu Page with
Feature Icons
&
Power Supply, Time/Date, and
Backlighting Status Bar.

Page Basics: The Main Pages

The Main Menu provides you with a directory of the eTrex Vista's advanced features. From the Main Menu page you can mark and create new waypoints; find map items such as cities, interstate exits, addresses, points of interest, etc.; create routes; save track logs; setup system operating features; or access and use unit accessories.

Main Menu Pages

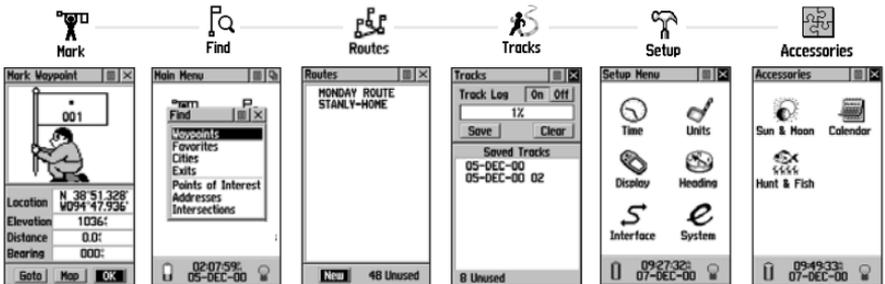

Mark Waypoint Page - Allows you to mark and record your current location.

Find Menu - Allows you to find and Goto a map location or waypoint.

Routes Page - Allows you to create a route to a destination, with waypoints along the way.

Tracks Page - Allows you to save a Track Log and navigate a previous path of travel.

Setup Pages - Allow you to set the time, select units of measure, set display backlighting and contrast, select from heading options, select interfaces to compatible external devices, and select system operating modes.

Accessories Page - Provides Sun & Moon position data, a Calendar with date and note capability, and best times for Hunting and Fishing.


Tracks [Close]

To exit these pages, highlight the on-screen 'X' button and press in on the CLICK STICK.

Setting the Correct Time

If the time displayed in the field at the bottom of the Main Menu does not match the time for your current location (time zone), you may need to set the time. Use the Main Menu to access the Setup Pages, select the Time Icon and then follow instructions for setting the time on page 53.

Basic Navigation

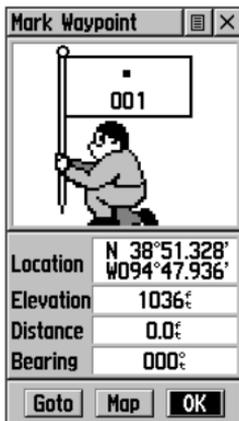

The Mark Waypoint Page displays your Marked Waypoint, along with the latitude and longitude and approx. elevation. On-screen buttons can create a Direct path (Goto) to the waypoint, show it on the map (Map), and confirm your selection as a waypoint (OK).



The Data Entry Keyboard

To learn how to use your eTrex Vista, begin by using some basic navigation techniques such as marking your current location as a waypoint, and travel a short distance and allow yourself to be guided back to where you started.

Marking your Current Location as a Waypoint

The first step in most navigation exercises is to mark your current location as a waypoint so you can return to it later.



NOTE: The eTrex Vista must be "READY TO NAVIGATE" before you can Mark a waypoint.

To Mark a Waypoint:

1. Press in and hold the **CLICK STICK** until the 'Mark Waypoint' Page is displayed. Whenever you hold in on the **CLICK STICK**, your current location will be marked as a new waypoint with a three-digit number assigned.

Before saving it, you can personalize the newly marked waypoint by changing the numeric designation to a more meaningful name. You can Also give it a map symbol to make it more recognizable when viewed on the map.

To change the waypoint name:

1. Use the **CLICK STICK** to highlight the waypoint name field (001) and then press it in to display the data entry keyboard.
2. Use the **CLICK STICK** to highlight the desired characters for your new name and then press it in to place a character in the data field. The field will automatically move to the next character position.
3. Repeat the process until you have completed the new name or have reached the character limit for the field. Then highlight 'OK' on the keyboard and then press in on the **CLICK STICK** to complete the name entry and close the keyboard.

To change the waypoint symbol:

1. Use the **CLICK STICK** to highlight the waypoint symbol field on the Mark Waypoint Page and then press it in to display the list of symbols.
2. Use the **CLICK STICK** to move up and down the list to highlight the desired symbol and then press it in to place the symbol in the field on the page.
3. Use the **CLICK STICK** to highlight the on-screen 'OK' button at the bottom of the page and then press it in to save your new waypoint. The waypoint can be retrieved later using the Find Menu.

Now that you've marked your location, you can begin to practice some basic navigation techniques.

There are two main pages that help you navigate; the Map Page and the Navigation Page.


Press the **PAGE** button repeatedly until the Map Page is displayed. You will see the new waypoint in the center of the map. If you renamed it, it will display the new name and a map symbol.

Adjust the map scale to 300 feet by pressing the **ZOOM IN** or **OUT** button on the side of the unit until the scale in the lower left corner of the map reads 300 ft.


To Use the Map Page:

1. Observe the new waypoint you just marked displayed in the center of the map.
2. Begin walking or driving around for a few minutes and then stop. (If in a car, make certain the unit has a clear view of the sky through the windshield in order to receive satellite signals.)
3. Observe that your location and movement is shown by the 'Pointer Icon' and that your path of travel (a Track) is shown by a dotted line.
4. You can follow the Track back to the waypoint, but instead we'll save time and take a direct route to it using another navigation tool, called a Goto, as explained on the following page.

Basic Navigation

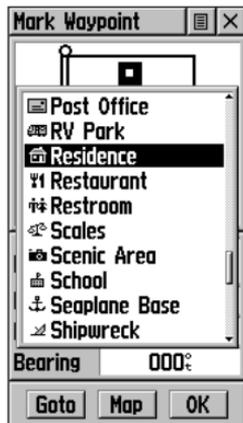


The Mark Waypoint Page with the list of Map Symbols displayed

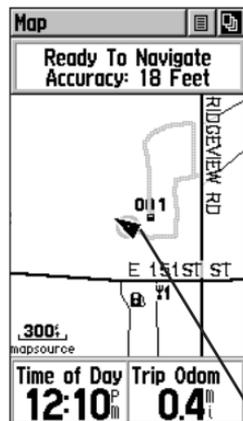

The Map Page displaying your Marked Waypoint and a Track defining your path of travel. The Accuracy Circle, surrounding the Position Icon indicates the accuracy of your position to within the circumference of the circle.

Basic Navigation

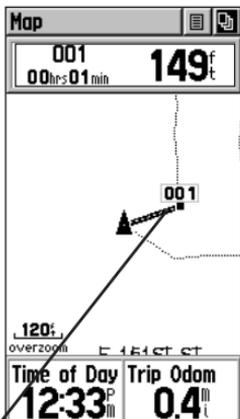

The Map Page with a Goto line connecting your location to your original Marked Waypoint



The Navigation Page with the Bearing Pointer showing you the direction to go. The Compass Ring provides you with orientation information.



The 'Stop Navigation' Option.

Navigating Back to Your Starting Point

Now we will navigate back to the waypoint you marked at the beginning of this exercise using the Goto function.

Going To (Goto) the Marked Waypoint:

1. Press and release the **FIND** key to display the Find Menu.
2. Use the **CLICK STICK** to highlight and select 'Waypoints', from the list of categories.
3. You will be prompted to select find 'Nearest' or find 'By Name'. Select 'Nearest' and press in on the **CLICK STICK** to display the Nearest List.
4. The waypoint you had previously marked and saved will be on the list. Use the **CLICK STICK** to highlight the waypoint and then press in to display the Information Page for the waypoint.
5. Use the **CLICK STICK** to highlight the 'Goto' on-screen button and then press it in to activate a Goto.

Press the **PAGE** button until the Navigation Page is displayed.

Walk in the direction of the bearing pointer until it points to the top of the compass ring. If it points to the right, you need to move to the right, if it points left, you need to move to the left. When it points straight up, you are on course to your destination. The Goto will provide you with a direct route back to the waypoint and will not necessarily follow the track you created.

The destination name, distance to the destination, and time to reach it are displayed in the window at the top of the screen. Two additional data fields are provided at the bottom of the page and can be programmed to display a variety of navigation data such as speed, heading, etc. When you begin to approach the waypoint, an "Arriving At Destination" message will appear. You can view your progress by toggling between the Map and Navigation Page.

To stop navigation, select 'Stop Navigation' from either the Map or Navigation page's options menus.

You have now completed a basic exercise in GPS navigation. As you learn more about the unit's operation, you will be able to apply more features to your navigation skills.

Overview

Because the eTrex Vista relies on satellite signals to provide you with navigational guidance, the unit's view of the sky will determine how fast you achieve navigational status. GPS signals do not travel through rocks, buildings, people, metal, or heavy tree cover...so keep the unit in clear view of the sky for best results.

The Satellite Page provides picture of satellite signal tracking and tells you when the unit is ready for navigation. At least three satellite signals are needed to find your location.


The Skyview graphic represents a view looking up at the sky from your current location showing satellites and their assigned number. The outer ring represents the horizon around you and the inner circle a position in the sky at a 45° angle from your location. A Signal Strength Bar for each satellite shown just below. Satellites and their signals appear as hollow shapes until a signal is received and then they appear darkened in. The stronger the signal, the taller the signal bar.

If the unit cannot initially (when first turned on) determine its location, it will display a "Poor Satellite Reception" message with four options. Each offers a brief explanation when highlighted to guide your decision.

When indoors or where a clear view of the sky is obstructed or you want to save battery power, select the 'Use With GPS Off' option from the Satellite Page Option Menu. You can enter data, create routes, etc., but cannot navigate in this mode. You can orient the satellite skyview by selecting optional 'Track Up' (your direction of travel) or 'North Up' with the satellite skyview oriented to the north. If you have moved more than 600 miles since you last used the unit you may require use of the 'New Location' option which helps the unit to find itself and speeds acquisition.

Once satellite tracking has been achieved, your location coordinates and the elevation are shown at the bottom of the Satellite Page.


The Satellite Page

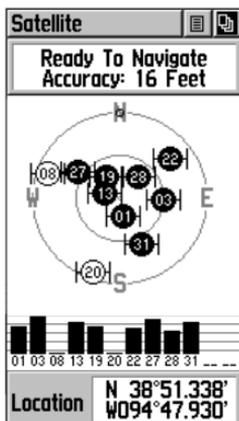

Satellite Page
with 8 Satellites Being Tracked




There are four initialization options for the "Poor Satellite Reception" message.

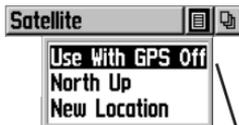

Satellite Page Options Menu
Highlight the on-screen button at the top of the page & press in on the CLICK STICK.


The Satellite Page

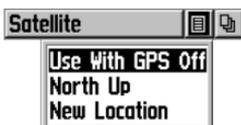

The Satellite Page Options Menu



"GPS Off" Message

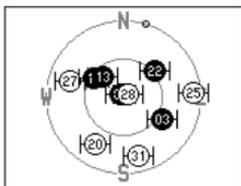

'North Up' Skyview Orientation

'Use Map' option for determining your current location.



Step-by-Step Instructions

How to select the 'Use With GPS Off' option:

1. Use the **CLICK STICK** to highlight the Option Menu button at the top of the page and then press it in to display the Options Menu.
2. Use the **CLICK STICK** to highlight the 'Use With GPS Off' option and then press it in to activate.
3. Observe that the Satellite Page title block now states "GPS Off".
4. The eTrex Vista will now stop tracking satellites and should not be used for navigation. Whenever the unit is turned On it returns to Normal GPS operation.

How to select 'Track Up' or 'North Up':

1. Follow procedures for displaying the Options Menu.
2. Highlight either the 'Track Up' or 'North Up' option (depending on which is currently in use), and press in on the **CLICK STICK** to activate.

How to enter a new location:

1. Follow procedures for displaying the Options Menu.
2. Highlight 'New Location' and press in on the **CLICK STICK** to display choices of 'Auto' or 'Use Map'.
3. If you choose 'Auto' the eTrex Vista will determine your new location automatically.
4. If you choose 'Use Map' a map page will appear with instructions stating, "Point to your approximate location and press ENTER". Use the **CLICK STICK** to move the map pointer to your location on the map and press it in.

Navigation Methods- Overview

Active Navigation is supported by three of the six Main Pages:

The Map Page graphically shows you map details, your current location, your elevation, marks your route to a destination with a route line, and leaves a trail (track log) of where you've been.

The Navigation Page tells you what direction to go and the direction you are traveling.

The Trip Computer Page records and displays travel data, like your speed, the distance you have traveled, or the distance to travel, and the time of day or the time remaining before reaching a destination and more.

Methods of Navigating using the eTrex Vista

There are four methods of navigating when using the eTrex Vista and each is graphically displayed on the Map Page.


Goto - A direct path to a map location, waypoint, city, address, etc.)

Track - A previous path of travel that has been stored (logged) in the eTrex Vista. A Track allows you to repeat a path or to return to your starting point on the same path using the GARMIN TrackBack feature.


Route - A path to a destination consisting of landmarks along the way (waypoints, cities, highway exits, points of interest, intersections, etc.).

Travel when not on a Goto, Track or Route - This is best described as travel without entering a destination in the eTrex Vista. The Map Page displays your real-time movement as you travel with the unit turned on and receiving satellites.


Navigation Methods

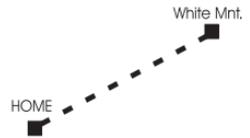

A Goto

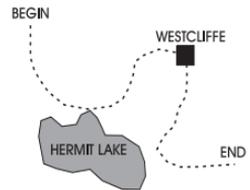

A Track

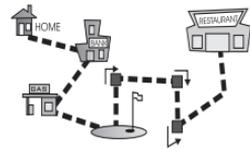

A Route



Travel when not on a Goto, Track, or Route as indicated by the 'Pointer Icon' and a dotted line indicating your path of travel.


The Map Page



The Map Page




Position Icon

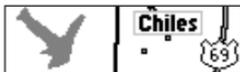

Map Features



Map Scale

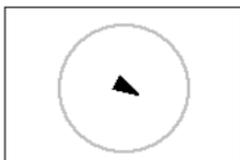

Accuracy Circle



Panning Arrow
(Map Pointer)

The Map Page - Overview

The Map Page shows your present position and direction of movement as a triangular 'Position Icon', in the center of the map. As you travel, the map display leaves a "trail" (track log) of where you've been. The map display also shows the map scale and geographic details such as lakes, rivers, highways, and towns.

Use the **ZOOM IN** and **OUT** buttons to change the map scale in order to show more map area with less detail or less map area with more detail. Press and hold to **ZOOM** the map scale rapidly.

In many instances the map will display an 'Accuracy Circle' surrounding the 'Position Icon'. The eTrex Vista uses both map resolution and GPS accuracy in defining your location to a point within the circle. The smaller the circle, the more accurate your location. For the most accurate location information, refer to the Satellite Page

When using the 'Pan Map' feature, a small outline arrow (Map Pointer) can be moved about the page to highlight and identify map items or to scroll the map to view areas not shown on the display screen.

A Status Field at the top of the page provides satellite tracking and location accuracy information.

Two optional Data fields at the bottom of the page can be programmed to provide a variety of travel and navigation information.

More detailed map features as well as information about those features can be downloaded to the unit from a GARMIN MapSource CD-ROM. When using MapSource data, the word 'mapsource' will appear below the map scale whenever you zoom in to view map details.

The Map Page Options Menu allows you change the arrangement of page features, stop active navigation, pan the map, and customize the map itself to display features in a manner that meets your personal preferences.

Map Page Options - Overview

Map Page options allow a variety of operating and customizing features for your eTrex Vista.

Not all of the Map Page options are available at the same time. Many are replaced by an opposite option when they are selected, such as Hide Data Fields/Show Data Fields. The Map Page options are:

Pan Map - Allows you to move the Panning Arrow (Map Pointer) about on the map.

Stop Navigation - Stops navigating to a destination.

Hide Nav Status/Show Nav Status - Removes the navigation status window to expand the map area or inserts the navigation status window.

Hide Data Fields/Show Data Fields - Removes or Inserts two programmable data fields at the bottom of the page and expands or reduces the map area.

Setup Map - Displays the Setup Map Pages, which allows you to tailor the map to your requirements such as changing text size, map orientation, and map detail.

Restore Defaults - Returns the Map Page to the original factory settings (defaults).


Map Page Options - Step-by Step Instructions

To select a map page option:

1. Highlight the Option Menu on-screen button at the top of the display screen and then press in on the **CLICK STICK** to open the menu.
2. Highlight the desired option on the menu and then press in on the **CLICK STICK** to activate the option.
3. To close without making a selection, move the **CLICK STICK** to the right.

Map Page Options Menu

On-screen Map Page Options Menu button

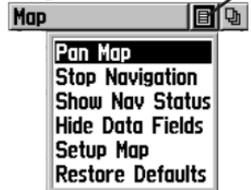


Map Page Options Menu with 'Pan Map' selected.

When no active navigation is being used 'Stop Navigation' will appear gray.


If 'Show Data Fields' is selected, it will be replaced by the 'Hide Data Fields' option.

The 'Setup Map' option consists of five sub-pages.

Map Page Options

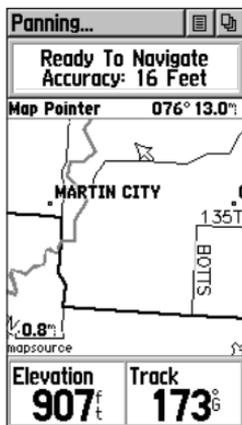

Map Page with
Panning Arrow

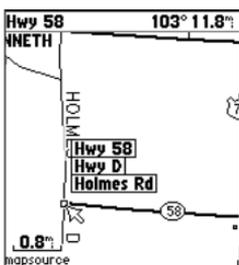

Highlighted Map Item



Map Item Information

Using the Panning Arrow - Overview

The Map Page pan function allows you to display an arrow used to point at and identify items on the map, and to move the map in order to view areas beyond the current viewing area on the display.

The map panning function is activated from the options menu on the Map Page. The **CLICK STICK** moves the panning arrow (also referred to as the map pointer) in the desired direction on the map page. If the arrow moves to the edge of the map display, the map will also move to reveal more map area. When the arrow moves to the edge of the display, the map will take some time to redraw the new area of the map.

Whenever the panning arrow is placed on a map item, the name of that item will be highlighted. This feature applies to waypoints, roads, lakes, rivers ... nearly everything that is displayed.

Pressing and releasing the **CLICK STICK**, marks the arrow location or the map item information page. An option menu allows you to: add it to the Favorites list, add it to a route, project a waypoint from it, save it as a waypoint, or view the sun and moon phase from it. On-screen buttons at the bottom of the page allow you to Goto the map item, display it on the map or to select 'OK' and return to the Map Page.

When using the panning arrow, pressing the **FIND** button will display items with the panning arrow (map pointer) location used as a reference point for nearest items instead of your current location. Press the **PAGE** button to return to the Main Map Page.

Step-by-Step Instructions

To find details about or Goto a map item:

1. Use the **CLICK STICK** to move the panning arrow to the map item that you want to learn more about.
2. When the item's name is highlighted, press in and release the **CLICK STICK** to display the Information Page for that item.
3. Use the **CLICK STICK** to highlight and press the 'Goto' button on the page to navigate to the item.

Stop Navigation

The 'Stop Navigation' option allows you to quit navigation of a Goto, Route or Track in progress.

To stop navigation:

1. Select 'Stop Navigation' and then press in on the **CLICK STICK**.

When there is no active navigation, the 'Stop Navigation' option will appear "grayed out" and is non-functional.

Hide Navigation Status/Show Navigation Status

The 'Hide Nav Status/ Show Nav Status' option allows you to view GPS navigation data in a window at the top of the page that lists the status of satellite tracking and accuracy of GPS positioning. When hidden, more map area is displayed.

To hide or show Nav Status :

1. Select 'Hide' or 'Show' from the option list and then press in on the **CLICK STICK**.

Hide Data Fields/Show Data Fields

The 'Hide Data Fields/Show Data Fields' option allows you to view two programmable data fields. When hidden, more map area is displayed.

To hide or show Data Fields :


1. Select 'Hide' or 'Show' from the option list and then press in on the **CLICK STICK**.

Data Field Step-by-Step Instructions

To program a data field:

1. Use the **CLICK STICK** to highlight the data field and then press it in to display the options menu.
2. Highlight the desired option and then press in on the **CLICK STICK** to place it in the data field.


Map Page Options

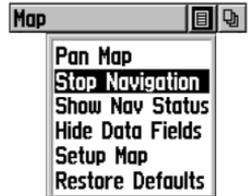

'Stop Navigation' Option




Map Page with Nav Status and Data Fields Hidden.

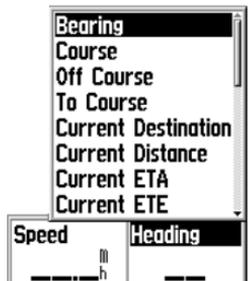

Map Data Fields with Options Menu

Data Fields

Status Field, shows satellite tracking and accuracy.
(Non-programmable)

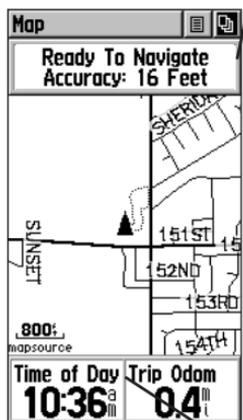

Two programmable data fields.



Programmable Data Field with list of options.

Data Field - Overview

Two optional data fields support the Map Page and can be programmed to display the following options:

Bearing - The direction from your current location to a destination.

Course - The direction from your starting location to a destination.

Off Course - The distance left or right you are from the original course (path of travel).

To Course - The compass direction you must go in order to get back to the original course.

Current Destination - The next waypoint on your route.

Current Distance - The remaining distance to your next waypoint

Current ETA - The estimated time of day you will arrive at your next waypoint.

Current ETE - The estimated time needed to arrive at the next waypoint on your route.

Elevation - The altitude above sea level.

Final Destination - The last waypoint on your route.

Final Distance - The remaining distance to your final destination.

Final ETA - The estimated time of day you will reach your final destination

Final ETE - The estimated time needed to reach your final destination.

Heading - Your moving direction.

Pointer - Indicates the direction to the next destination.

Speed - Your rate of travel can be displayed in miles per hour, kilometers per hour, or nautical miles per hour.

Sunrise - The time at which the sun rises on this day.

Sunset - The time at which the sun sets on this day.

Time of Day - The time for the selected time zone.

Trip Odometer - The accumulated distance traveled.

Turn - The angle difference (in degrees) between the bearing to your destination and your current line of travel. 'L' means turn Left. 'R' means turn Right.

Velocity Made Good - The speed at which you are closing on a destination along a desired course.

Vertical Speed - Your rate of altitude gain/loss over time.

Setup Map - Overview

The 'Setup Map' option displays the Map Setup Pages. These pages determine how map features are displayed allowing you to tailor the map to your needs.

The Map Page Setup Options

The Map Setup Page consists of five sub pages each accessed by an on-screen button. Each page provides a list of options for the following features:

Page - Orientation: 'Track Up' or 'North Up'.

Auto Zoom: On or Off.

Detail: Most, More, Normal, Less, and Least.

Lock on Road: On or Off.

Tracks - Saved Tracks: Scale options of Off, Auto, or 120 feet through 800 miles.

Track Log: Scale options of Off, Auto, or 120 feet through 800 miles.

Goto Line: Bearing or Course.

Map Features - Points of Interest: Scale options of Off, Auto, or 120 feet through 800 miles.

Waypoints: Scale options of Off, Auto, or 120 feet through 800 miles.

Street Label: Scale options of Off, Auto, or 120 feet through 800 miles.

Land Cover: Scale options of Off, Auto, or 120 feet through 800 miles.

Text - Points of Interest: Sizes from None, Small, Medium, or Large.

Waypoints: Sizes from None, Small, Medium, or Large.

Street Label: Sizes from None, Small, Medium, or Large.

Land Cover: Sizes from None, Small, Medium, or Large.

Transferred MapSource Map Data - Show or Do Not Show: On-Screen Check Boxes to activate or deactivate.

Scale options indicate the map scale at which Tracks, Tracks Logs, Map Features, or Text Boxes for Map Features will appear, allowing you to remove map clutter and define map features as desired.

Map Page Setup Options

Map Setup	
Orientation	North Up
Auto Zoom	Off
Detail	Normal
Lock On Road	Off

Page Setup

Map Setup	
Zoom	
Saved Tracks	AUTO
Track Log	AUTO
Goto Line	Bearing

Tracks Setup

Map Setup	
Zoom	
Pts Of Interest	AUTO
Waypoints	AUTO
Street Label	AUTO
Land Cover	AUTO

Map Features Setup

Map Setup	
Text	
Pts Of Interest	None
Waypoints	Med
Street Label	Med
Land Cover	Med

Text Setup

Map Setup	
Show	Map Name
<input checked="" type="checkbox"/>	Kansas City, Metroguide_USA, Nov 2000

Map Data

Map Page Setup Options



Map Page Setup
Feature Options


Zooming In and Out on the Map



Zoom In



Zoom Out

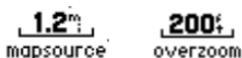

Map Scales and Descriptions

Step-by-Step Instructions

To use Setup Map options:

1. Select 'Setup Map' from the Options Menu and then press in on the **CLICK STICK** to display the Map Setup Page.
2. Highlight the desired sub-page button to display the features list for that sub-page.
3. Highlight a feature on the list and press in on the **CLICK STICK** to display the options list for that feature.
4. Use the **CLICK STICK** to highlight the desired option and then press it in to activate.
5. Press the **PAGE** button or the on-screen 'X' button to return to the Map Page.

Zooming In and Out - Overview

Use the **ZOOM IN** and **OUT** buttons to adjust the map scale, which is displayed at the bottom of the map.

The map scale is shown in the lower left hand side of the map display area. The scale is shown in the unit of measure selected from the 'Units' field of the Unit Setup Page (not to be confused with the Map Setup Page).

It is possible to zoom in so far that the resolution of the map data is exceeded and the appearance of the map will no longer be accurate. When this occurs, the word, "overzoom" will appear just below the map scale.

When using a MapSource map data, the word "mapsource" will appear below the map scale whenever you zoom in to view more detailed map features.

You can control the display of map details at specific map scales by using the Map Setup. Using the Setup options allow you to create clearer, "less cluttered", maps as you desire. Selecting 'Autozoom' adjusts the scale to show both your current location and next item you're navigating to.

Step-by-Step Instructions

To change the map scale:

1. Press the **IN** Zoom button to select a scale that shows more detail and a smaller map area.
2. Press the **OUT** Zoom button to select a scale that displays a larger map area, but with less detail.

Navigation Page - Overview

The Navigation Page provides active guidance with a rotating compass ring that shows your course over ground (track) while you're moving and a bearing pointer to indicate the current direction to your destination (bearing) relative to the course over ground.

The Compass Ring and 'Bearing Pointer' work independently to the direction of your movement and the direction to your destination. For example: if the arrow is pointing straight up, you are going directly to your destination. If it points any direction other than up, turn toward the arrow until it points up and then continue in that direction. If you are using the 'Course Pointer' option instead and you drift away from the line of travel to your destination (Course Deviation Indicator - CDI), the pointer provides graphic indication of drift (right or left) and displays the distance off course.


The Compass Ring works in two ways:

An Electronic Compass (which can be turned On or Off, as explained on page 8) functions as a magnetic compass when you are not moving. It must be calibrated when you first use the eTrex Vista and after new batteries have been installed. The electronic compass allows you to project a bearing using the two sighting marks on the front of the unit, and when using the 'Sight 'N Go' feature (see page 27) it allows you to visually locate a landmark, lock in its magnetic bearing, and travel to it using a projected waypoint or by navigating along the locked bearing line. It is helpful when using paper maps to orient them to North.


When the Compass is in the On mode and you are moving, the heading is controlled by the GPS receiver. It switches to the GPS receiver when your rate of travel reaches a pre-set speed and comes back on when you have stopped moving after a pre-set period of time which you can determine by using the Heading Setup Page. (Refer to page 55)

The accuracy of the Electronic Compass is affected adversely by nearby items that generate magnetic fields, like cars and buildings, etc. It must be calibrated outdoors.

The Navigation Page

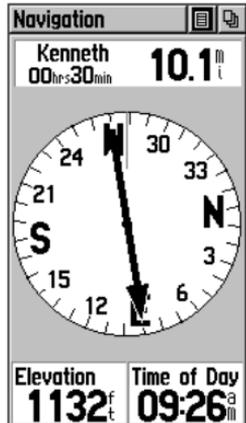


Navigation Page
with Bearing Pointer
Active

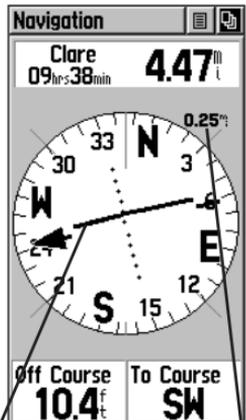

Navigation Page with
Course Pointer and
Course Deviation Indicator
(CDI) Scale active.
Use the ZOOM buttons to
adjust the CDI scale
setting.

The Navigation Page

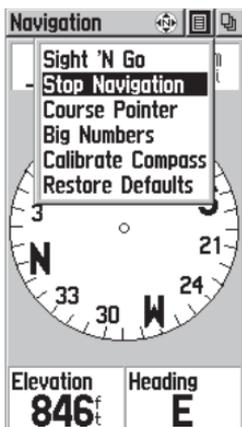

The Navigation Page also displays a 'Waypoint' field above the compass or highway with the name of the next waypoint on your route or of your final destination. The map coordinates for that item as shown just below the name

An on-screen button at the top of the page displays the Options Menu for this page.

Options include: 'Sight 'N Go', 'Stop Navigation', 'Bearing Pointer', 'Course Pointer', 'Big Numbers', 'Calibrate Compass', and 'Restore Defaults'. 'Big Numbers' converts information in the data fields to display in a large text format while removing the Status Window and reducing the size of the compass ring.

At the bottom of the page are two data fields that are user programmable with a choice of different data options:


Bearing	Final ETA
Course	Final ETE
Off Course	Heading
To Course	Speed
Current Destination	Sunrise
Current Distance	Sunset
Current ETA	Time of Day
Current ETE	Trip Odometer
Elevation	Turn
Final Destination	Velocity Made Good
Final Distance	Vertical Speed

(Definitions on page 22)

Step-by-Step Instructions

To change data fields:

1. Use the **CLICK STICK** to highlight the desired data field and then press it in to display the list of data options.
2. Select the desired option from the list and press in on the **CLICK STICK**.
3. You can reset the data fields at any time to change the type of data viewed while navigating.

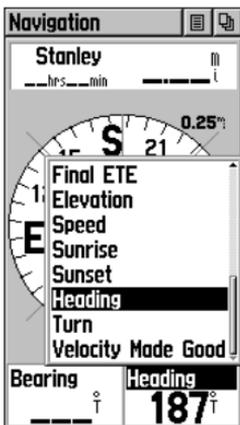

Navigation Page
Data Fields
Options Menu

(The slider at the side of the menu indicates a multi-page list of options.)

Step-by-Step Instructions

Using options to Setup the Navigation Page:

1. With the Navigation Page displayed, use the **CLICK STICK** to highlight the Options Menu button at the top of the page. Then press it in to display the menu.
2. Observe the Options Menu: If you are currently navigating on a Goto, Track, or Route, the 'Stop Navigation' option will be active, otherwise it will be "grayed out". The next option on the list will be 'Bearing Pointer', which is displayed on the compass ring. The next option on the list will be 'Big Numbers' which displays information in two data fields in large sized numbers above and below the compass while displaying the compass in a smaller scale followed by 'Calibrate Compass'. The last option on the list is 'Restore Defaults'.
3. Use the **CLICK STICK** to highlight your selection and then press in to activate.

Calibrating the Electronic Compass:


1. If you selected the 'Calibrate Compass' option, then follow the instructions for calibrating the Compass on page 8.

With the compass properly calibrated, you can use the Sight 'N Go feature to travel to an object that you can see but cannot travel in a direct line to reach.


Using Sight 'N Go to navigate to a destination:

1. Use the **PAGE** button to access the Navigation Page and then use the **CLICK STICK** to access the Options Menu.
2. Use the **CLICK STICK** to highlight the Sight 'N Go option and press it in to activate the Sight 'N Go feature.
3. Observe the compass ring with pointer is in-line with the two sighting marks on the case.
4. Hold the eTrex Vista at eye level and then line up the two sighting marks on the case with the distant object. Then press in on the **CLICK STICK** to 'Lock Direction'.
5. Select 'Set Course' and press in on the **CLICK STICK**.
6. You can now begin traveling to your destination using the pointer as a guide. If you are not holding the unit level, the 'Hold Level' text on the screen will turn on and off.

The Navigation Page

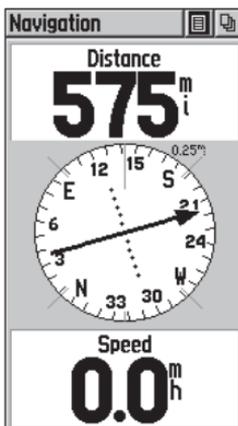


Navigation Page
'Big Numbers' Option

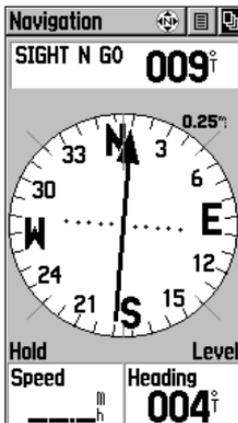


Electronic Compass
with Sight 'N Go
Active

The Altimeter Page

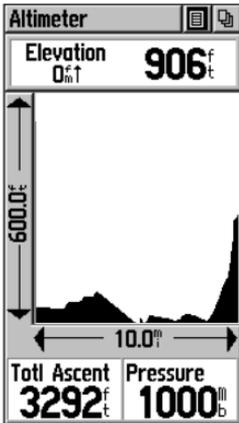

*Altimeter Page
with Elevation Plot
Displayed*

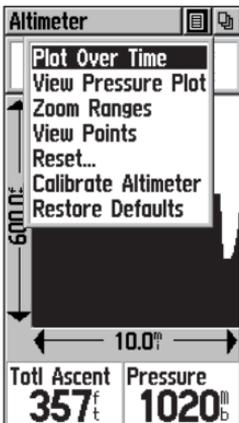

*Altitude Page
Options Menu*

Altimeter Page - Overview

The Altimeter Page provides you with a variety of altitude information: A Status Window that displays current elevation and current rate of ascent/descent, a profile of elevation changes over distance or time, a profile of pressure changes over time, and two user selectable data fields.

The Status Window is located at the top of the page and displays the current elevation and your current rate of ascent or decent when moving. It can also display the ambient pressure.

The Profile Field is located in the center of the page and can be configured to display either elevation or ambient pressure plots as selected from the Altimeter Page Options Menu.

Data Fields at the bottom of the page are user selectable and display a variety of recorded or current data.

The Page Options Menu allows you to select the type of information and how it is to be displayed. Page Options include: 'Plot Over Time', 'Plot Over Distance', 'View Elevation Plot', 'View Pressure Plot', 'Zoom Ranges', 'View Point', 'Reset', 'Calibrate Altimeter', and 'Restore Defaults'.

You can customize the 'View' option displays using the 'Zoom Ranges' option to determine time, distance, pressure, and elevation parameters. If you know the correct altitude for your location, you can increase the accuracy of the altimeter using the 'Calibrate Altimeter' option. Use the 'Reset' option to clear recorded data from the page and to begin recording new data.

Plot Over Time/Plot Over Distance

These two measurement options (changes over a set period of time or changes over a set distance) apply only to the 'View Elevation Plot' option, while the 'View Pressure Plot' option is measured by time and pressure only. When one option is active, the other is displayed on the Page Options Menu.

View Elevation/View Pressure Plots - Overview

When selecting the 'View Elevation Plot' option you can plot a profile of elevation changes that occur as you navigate over a set distance or period of time. When you select 'View Pressure Plot' you can view a record of changes in barometric pressure for a set period of time. When one option is active the other will be displayed on the Page Options Menu.

Step-by-Step Instructions

To view Elevation or Pressure plots:

1. Use the **CLICK STICK** to highlight the desired option from the page Options Menu and then press in to display the plot.
2. Adjust time and distance measurement as desired using the Elevation Plot Zoom Ranges feature explained below.
3. To clear the plot and start a new one, you must clear the 'Track Log'. Refer to page 51 for detailed instructions.

Zoom Ranges - Overview


You can set the Zoom Ranges for elevation, distance, or time when you display the 'View Elevation Plot'. Ranges for vertical distance are: 200, 400, 600, 800, 1,000, 2,500 and 5,000 feet. ranges for distance are: 0.2, 0.5, 1, 5, 10, 15, and 25 miles. Ranges for time are: 2, 5, 10, 20 and 30 minutes, 1 and 2 hours. Ranges for 'View Pressure Plot' are fixed at 6.8 millibars and 12 hours.

Step-by-Step Instructions


To zoom measurement ranges:

1. Select the type of plot you want to display as explained above and the use the **CLICK STICK** to highlight 'Zoom Ranges' from the page Options Menu.
2. Press in on the **CLICK STICK** to display the Zoom Ranges Page. Move the **CLICK STICK** Up or Down to adjust the vertical distance and Left or Right to adjust either the time or distance. Press in to return to the Plot Page.


The Altimeter Page

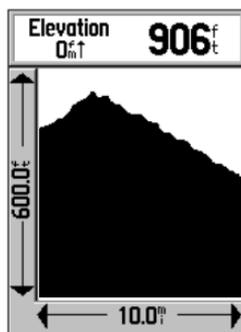

Elevation Plot

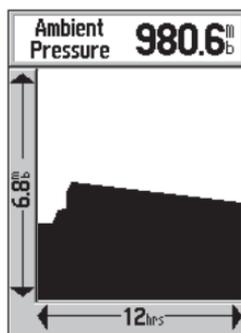


Pressure Plot

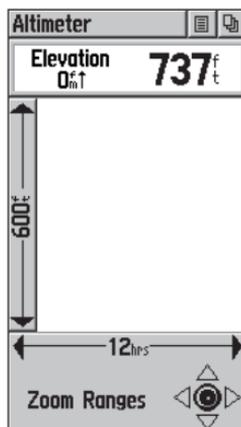

*Altimeter Page
'Zoom Ranges'
Option*

The Altimeter Page

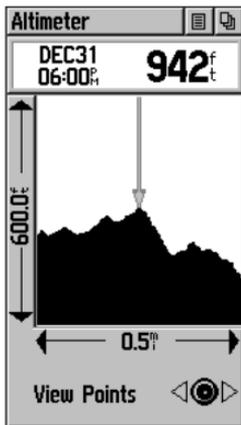

Altimeter Page
'View Points' Option

View Points - Overview

The 'View Points' option allows you to scroll through the stored elevation profile and to view a single point along the profile. When the pointer is stopped at a location along the profile, the elevation, time of day and date the point was created are displayed.

Step-by-Step Instructions

To use the 'View Points' option:

1. Use the **CLICK STICK** to access the page Options Menu.
2. Highlight the 'View Points' option and press in on the **CLICK STICK** to display the View Points Page.
3. Move the **CLICK STICK** Right or Left to scroll the profile past the pointer in the center of the page.
4. Observe that as the profile moves past the pointer, the status window at the top of page changes to display the date, time, and altitude for the point beneath the pointer.


Calibrate Altimeter - Overview

Because the eTrex Vista relies on the Barometric pressure to determine the altitude and the pressure at any given elevation can fluctuate, you can calibrate the altimeter to increase its accuracy. In order to do this you must know the altitude at your current location. You can obtain this information from a map or other reliable source. Of course, if that information matches the elevation display on the unit, calibration isn't necessary.

Step-by-Step Instructions

To calibrate the altimeter:

1. Use the **CLICK STICK** to access the page Options Menu.
2. Highlight the 'Calibrate Altimeter' option and press in on the **CLICK STICK** to display the Calibration Page.
3. The page will display a message stating "Do You Know The Correct Elevation?". Highlight the on-screen "Yes" button and press in on the **CLICK STICK**.
4. A number keyboard will display. Use the **CLICK STICK** to enter the new elevation, then highlight 'OK' and press it in to return to the Altimeter Page.
5. If you selected 'No', you will also return to Altimeter Page, but with no change the elevation.

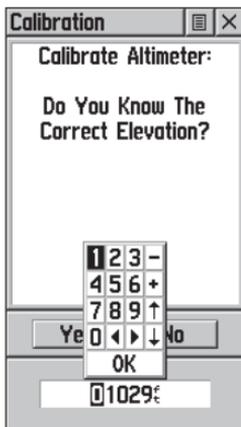

Calibration Page
with 'Number' keyboard
displayed.

Enter known altitude,
highlight 'OK' and press in
on the **CLICK STICK** to
calibrate the altimeter.

Reset - Overview

You can reset the elevation data and the maximum elevation data by selecting the 'Reset' option from the page Options Menu.

Step-by-Step Instructions

To reset the elevation data and max elevation fields:

1. Use the **CLICK STICK** to highlight the 'Reset' option from the page Options Menu and press in on the **CLICK STICK** to display the "Reset" page.
2. Use the **CLICK STICK** to highlight the reset options on the page and then press in on the **CLICK STICK** to place a check mark in the box next to a selected item.
3. Move to the 'Apply' button and press in on the **CLICK STICK** to reset the data fields for the selected items.

Data Field - Overview

The two user-selectable data fields support this page and can be programmed to display the following data options:

Average Ascent - The avg. vertical distance of ascents.

Average Descent - The avg. vertical distance of descents.

Maximum Ascent - The maximum ascent rate in feet per minute.

Maximum Descent - The maximum descent rate in feet per minute.

Maximum Elevation - The highest elevation reached.

Minimum Elevation - The lowest elevation reached.

Ambient Pressure - The uncalibrated current pressure.

Normalized Pressure - The calibrated current pressure.

Total Ascent - The total distance ascended.

Total Descent - The total distance descended.

Vertical Speed - The rate of altitude gain/loss over time.

Step-by-Step Instructions

To program a data field:

1. Use the **CLICK STICK** to highlight the desired data field and then press it in to open the data field options menu.
2. Use the **CLICK STICK** to move Up or Down the menu to highlight a desired data option and then press in to place it in the data field.


The Altimeter Page



*Reset Options Menu
Useful for clearing old data.*

IMPORTANT!

Use care when selecting DELETE options as this will remove all saved Tracks, Waypoints, and Routes from the unit memory.

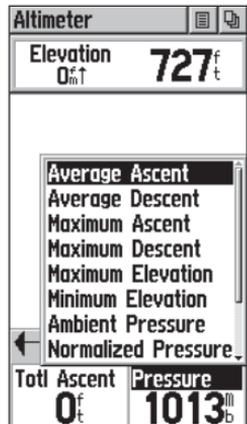

*Navigation Page
'Big Numbers' Option*

Trip Computer Page

Trip Computer	
Trip Odom 0.0 ^f _t	
Moving Time 00 ^m 00 ^m _{mm}	
Stopped 07 ^m 11 ^m _{mm}	
Odometer 000000 ^f _t	
Speed _ _ _ ^m _h	Max Speed 0.0 ^m _h
Moving Avg 0.0 ^m _h	Overall Avg 0.0 ^m _h

Trip Computer Page

Moving Avg. Speed
Overall Avg. Speed
Odometer
Trip Odometer
Trip Time - Moving
Trip Time - Stopped
Trip Time - Total
Time of Day

Data Field Options Menu

Reset	
<input type="checkbox"/>	Reset Trip Data
<input checked="" type="checkbox"/>	Reset Odometer
<input type="checkbox"/>	Reset Max Speed
<input checked="" type="checkbox"/>	Reset Elevation Data
<input checked="" type="checkbox"/>	Reset Max Elevation
<input type="checkbox"/>	Clear Track Log
<input type="checkbox"/>	Delete Saved Tracks
<input type="checkbox"/>	Delete All Waypoints
<input type="checkbox"/>	Delete All Routes
Select All	
Unselect All	
Apply	

Reset Options Menu

Useful when starting a new trip to clear old data.

Trip Computer Page - Overview

The Trip Computer provides a variety of data fields with read-outs of current information as you travel. Eight fields display navigation information and are user programmable. The default settings for these fields are shown in the illustration to the right.

Here is the list of data field options:

Current Destination	Speed
Current Distance	Maximum Speed
Current ETA	Moving Avg. Speed
Current ETE	Overall Avg. Speed
Elevation	Odometer
Final Destination	Trip Odometer
Final Distance	Trip Time - Moving
Final ETA	Trip Time - Stopped
Final ETE	Trip Time - Total
Heading	Time of Day
Pointer	(Definitions on page 22.)

The Option Menu for the page provides the following options: **Reset**, **Big Numbers**, and **Restore Defaults**.

Step-by-Step Instructions

To program a data field:

1. Use the **CLICK STICK** to highlight the desired data field and then press it in to open the data field options menu.
2. Use the **CLICK STICK** to move Up or Down the menu to highlight a desired data option.
3. Press Down on the **CLICK STICK** to select the option and place it in the data field.

To access the page Options Menu:

1. Use the **CLICK STICK** to highlight the Options Menu on-screen button and press it in the display the options menu.
2. Highlight the desired option and then press in on the **CLICK STICK** to activate.
3. To activate individual 'Reset' options, highlight the item on the list and then press in on the **CLICK STICK** to place or remove the check mark.



NOTE: Use care when choosing the 'Delete' options, as all stored Tracks, Waypoints, and Routes can be permanently deleted when resetting the Trip Computer.

Using the Main Menu

The Main Menu provides access to additional eTrex Vista feature pages. The pages listed below provide enhancements to eTrex Vista operation.

Press the **PAGE** button repeatedly to cycle to the Main Menu....Or select it from the page list at the top of each main page

Mark Waypoint Page - Allows you to mark and store a waypoint for your current location or a map pointer location.

Find Menu - Allows you to locate, Goto, or use as part of a Route; Waypoints, Favorite Locations, Cities, Interstate Exits, Points of Interest, Addresses, and Intersections.

Route Page - Allows you to create and store routes for repeated use.

Tracks Page - Provides access to the track log and saved tracks.


Setup Page - Allows tailoring of items such as time format, units of measure, display backlighting timeout and contrast adjustment, interface Setups, heading selection and system software information.

Accessories Page - Allows you to access Sun and Moon data, a Calendar, and Hunting and Fishing data.


Information about the status of backlighting, time and date, and unit power are displayed in the window at the bottom of the Main Menu Page.

The battery icon will display the approximate amount of reserve power available. When the unit is powered by a cigarette lighter adapter, a power plug icon will replace the battery icon. The date and time are displayed in the center of the window and when backlighting is active the light bulb to the right will appear illuminated.

The Main Menu

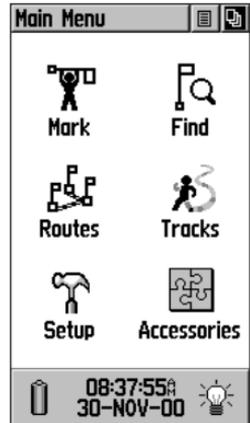

*Main Menu with
Feature Icons
and Power, Date/Time,
and
Backlight Status Window*

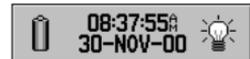


*Power, Date/Time, and
Backlight Status Window*

Marking Your Location




Mark Waypoint Page

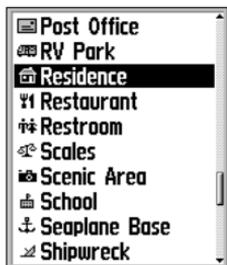

Map Symbol List

Creating a Waypoint

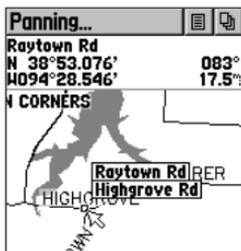

Marking a Waypoint with the Panning Arrow

The Mark Waypoint Page - Overview

The Mark Waypoint Page allows you to mark and record your current location as a waypoint and appears with a graphic name block (man with a flag) that displays the assigned number for that waypoint and waypoint symbol.

Step-by-Step Instructions

To mark your current location as a waypoint:

1. Press in and hold the **CLICK STICK** until the Mark Waypoint Page appears. You can also access this page by highlighting the Mark Icon on the Main Menu Page and then pressing in on the **CLICK STICK**. It will automatically be assigned a 3-digit number.
2. To change the name of the waypoint, use the **CLICK STICK** to highlight the waypoint name field.
3. To assign an identifying symbol to a waypoint, use the **CLICK STICK** to highlight the symbol block just above the waypoint name.
4. To save the waypoint, highlight 'OK' and press in on the **CLICK STICK**.
5. If you do not want to save it as a new waypoint, press the **PAGE** button before pressing any other to cancel.

To create a waypoint using the map panning arrow:

1. With the Pan Map feature active, move the panning arrow (map pointer) to the map item you want and highlight it.
2. Press in and release the **CLICK STICK** to display the item information page.
3. With the Information Page displayed highlight the options menu button at the top of the page and then press the **CLICK STICK** in to open the menu.
4. Highlight the 'Save As Waypoint' option and press the **CLICK STICK** in to save the map item as a waypoint.

To create a waypoint using the panning arrow when a map item is not highlighted:

1. With the Pan Map feature active, move the panning arrow (map pointer) on the map to the location you want to mark and then, press the **CLICK STICK** in and release.
2. The Mark Waypoint Page will appear, automatically assigning a number to the waypoint.

Be certain to press and release the **CLICK STICK** for this operation. Pressing and holding the switch will mark a waypoint for your current location. See “Marking Your Location” on page 34.


To create a waypoint by manually entering its coordinates (lat/lon):-

1. Press in and hold the **CLICK STICK** to access the Mark Waypoint Page.
2. Highlight the Location Field on the Mark Waypoint Page and enter the new coordinates using the numerical keyboard. Highlight and press 'OK' when finished.
3. You may also change the waypoint name and/or symbol.


To move a waypoint by dragging it on the map:

1. Use the Find Menu to display the Waypoint Page for the waypoint you want to move. Refer to the section titled “Using the Find Menu”.
2. Highlight and press the 'Map' on-screen button to display the map for the waypoint.
3. With the waypoint highlighted by the panning arrow, press in and release the **CLICK STICK**. The word “Move” will appear beneath the panning arrow.
4. Use the panning arrow to drag the waypoint to the new location and then press in on the **CLICK STICK** to place it.
5. Press the **PAGE** button before pressing the **CLICK STICK** to cancel moving of the waypoint and return to the Main Pages.

Creating a Waypoint

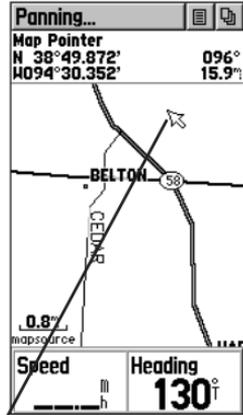


Marking a Waypoint on the map without highlighting a map item.

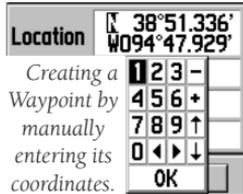

Creating a Waypoint by manually entering its coordinates.

Moving a Waypoint

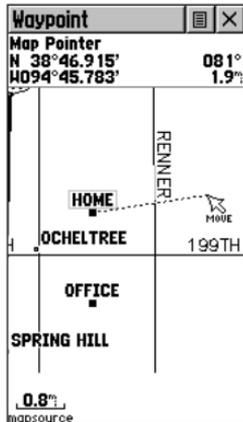

Moving a Waypoint

Projecting a Waypoint

Project Waypoint

010

Location N 38°58.440'
W094°57.125'

Elevation 0'

Distance 0.0'

Bearing 000°

Goto Map OK

Enter Distance and Bearing to project

Editing Waypoints

Waypoint

GARAGE

A	B	C	◀	▶	Back	1	2	3
D	E	F	G	H	Space	4	5	6
I	J	K	L	M	Shift	7	8	9
N	O	P	Q	R	OK	0	-	+
S	T	U	V	W	X	Y	Z	

Location N 38°51.558'
W094°47.929'

Elevation 1139'

Distance 0.0'

Bearing 000°

Goto Map OK

Using the keyboard to edit

Saving as a Waypoint

- Add To Favorites
- Add To Route
- Project Waypoint
- Save As Waypoint
- View Sun And Moon
- View Hunt And Fish

Projecting a Waypoint

Projecting a waypoint from any map item (another waypoint, etc.) allows you to establish a new waypoint on a bearing and distance projected from that map item.

To project a waypoint:

1. Select a map item from the Find Menu. (See page 37)
2. Highlight the Option Menu on-screen button at the top of the Information Page and press in on the **CLICK STICK** to display the Project Waypoint Page.
3. Press in on the **CLICK STICK** to display the numerical keyboard for entering the distance. Move from character to character
4. Enter the desired distance and bearing to the projected waypoint in the appropriate fields and then select 'OK' and press in on the **CLICK STICK** to complete.

Editing a Waypoint

A waypoint can be edited to change the map symbol, name, coordinates, or elevation. It can also be deleted.

To edit a waypoint:

1. Use the Find Menu to display the desired waypoint.
2. Make changes as desired to the waypoint map symbol, name, location coordinates, and elevation fields. Highlight the desired field and press in on the **CLICK STICK** to display the keyboard. Highlight the desired characters on the keyboard to enter new data and then select 'OK' and press Down to close the keyboard.
3. Highlight the 'OK' button the press in on the **CLICK STICK** to save the changes.

To delete a waypoint:

1. Use the Find feature to display the desired waypoint.
2. Highlight the 'Delete' button and then press in on the **CLICK STICK**.

To save any Map Item or Find Menu Item as a waypoint:

1. Access the Information Page for the desired item (highlighted from the map or selected from the Find Menu).
2. Open the Options Menu at the top of the page, select 'Save As Waypoint' and press in on the **CLICK STICK** to save the item to the Waypoints List.

The Find Menu - Overview

The Find Menu allows you to find stored locations (waypoints) and map items (cities, exits, etc.). They can be found by name or by those nearest to your current location (Position Icon). If you are using MapSource MetroGuide data, the list of find locations will be expanded to include categories for Points of Interest, Street Addresses and Intersections.

Press and release the **FIND** button to access the Find Menu.

The Find Menu allows you to locate and travel to:

Waypoints - Marked and saved locations on the map used as a destination or a point on the way (waypoints) to a destination. Refer to page 34 to mark or create a waypoint.

Favorites - A list of familiar and often used waypoints.

Cities - A list of cities in the basemap.

Interstate Exits - A list of all Exits on the nearest Interstate Highway, categorized by "All Types", "Services", "Rest Areas", and "Other" (weight stations, etc.).

Points of Interest - A list of restaurants, museums, hospitals, etc.

Addresses - A page with data entry fields for address number, street name, city and postal code, used to define an address.

Intersections - A page with data entry fields for two streets, a city, and postal code. Used to define an intersection.

For some categories, there are two methods of listing. The "By Name" list contains every item in the map database for the selected category, while the "Nearest" list contains only those items that are near to your Current Location or to the Map Pointer. Categories listed by either method will display a choose prompt.

These pages are structured with a set of sub-menus and location information pages that guide you through the process of finding locations. Use them to construct a Route, establish a direct line of travel (Goto), or when gathering information.


The Find Menu



Find Page using your current location as a point of reference




'Nearest' or 'By Name' Prompt

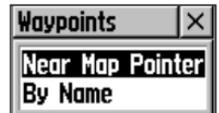

'Nearest' or 'By Name' Prompt.

Displayed when using the Map Pointer.

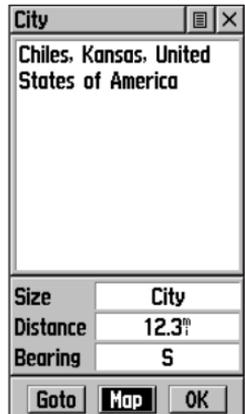


Item Information Page

The Find Menu



Waypoint Find List

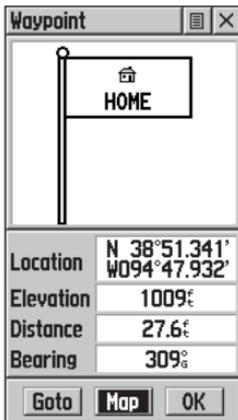

Waypoint Information Page



Favorites Category

Finding a Waypoint - Overview

Waypoints that you have created and stored in the eTrex Vista can be found by selecting the “Waypoint” option from the Find Menu. You can find a waypoint from the list of waypoints using the ‘By Name’ or ‘Nearest’ options explained on the previous page. When selected from the list the waypoint will be displayed on the Waypoint Information Page.

The Waypoint Information Page displays the waypoint name or number, a map symbol, the location in lat/lon, elevation, distance, bearing, and three on-screen buttons for ‘Goto’, ‘Map’, and ‘OK’ functions.

Step-by-Step Instructions

To find a waypoint:

1. Use the **CLICK STICK** to select the Waypoint option from the Find List and then press it in to display a prompt to select ‘By Name’ or ‘Nearest’. Select and press in on the **CLICK STICK** to display the Waypoints List.
2. Use the **CLICK STICK** to select the desired waypoint from the list and then press it in to display the Information Page for that waypoint.
3. With the Information Page displayed, you can select ‘Goto’ to create a direct line of travel to the waypoint. Select ‘Map’ to view the waypoint location on the map or select ‘OK’ to close the page.
4. Use the page option menu to add the waypoints to the ‘Favorites’ list, add it to an existing route, project a new waypoint from this location, view sun and moon, and best fishing and hunting time information for this waypoint.

Finding a Favorite - Overview

Favorites are map items and waypoints that have designated as those you would like to give a special status, as they are frequently used or have other special significance. The process for finding favorite waypoints from the ‘Favorites’ list is the same as finding a regular waypoint.

Step-by-Step Instructions

To find a 'Favorite':

1. Use the **CLICK STICK** to select the 'Favorites' option from the Find List and then press it in to display the list. Use the list option menu to select 'By Name' or 'Nearest'.
2. Use the **CLICK STICK** to select the desired Favorite from the list and then press it in to display the Information Page for that item.
3. With the Information Page displayed, you can select 'Goto' to create a direct line of travel to the item. Select 'Map' to view the waypoint location or select 'OK'.
4. Use the page option menu to add the item to an existing route, project a new waypoint from this location, or view sun and moon position data for this time and date.

Finding a City - Overview

Cities can be found by selecting the 'Cities' option of the Find Menu, selecting the city from the list of 'Nearest' or 'By Name', and then displaying the City Information Page.


The City Information Page for the selected city displays the city name, the size by population, and distance from you location. You can view it on the map or create a Goto direct route to the city from your current location, or from a location defined by the Panning Arrow (Map Pointer). You can also save it as a waypoint, or add it to an existing route.

Step-by-Step Instructions


To find a city:

1. Use the **CLICK STICK** to select the 'Cities' option, then press it in to display the find 'By Name' or find by 'Nearest' prompt. Selecting 'By Name', displays the keyboard to eliminate scrolling through the list of cities.
2. If using find 'By Name', begin spelling the name of the city by using the keyboard. When you have entered enough characters to define the name, a match list will be displayed. If you are using find 'By Nearest' scroll through the list to find the city you want. Use the **CLICK STICK** to select the desired city from the list and then press it in to display the Information Page for that city.
3. With the Information Page displayed, you can select 'Goto', 'Map', 'OK', or 'Save As' options.


The Find Menu

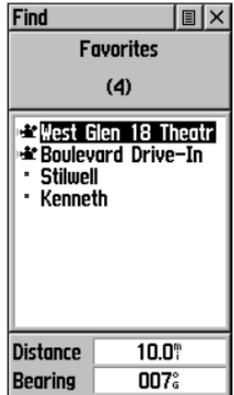

Favorites List

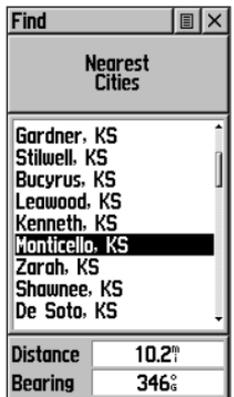


Find List for Nearest Cities

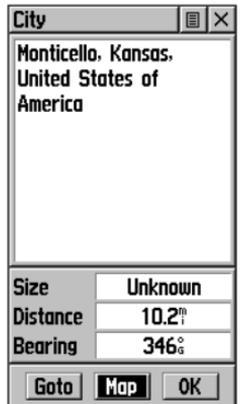


*City Information
Page*

The Find Menu

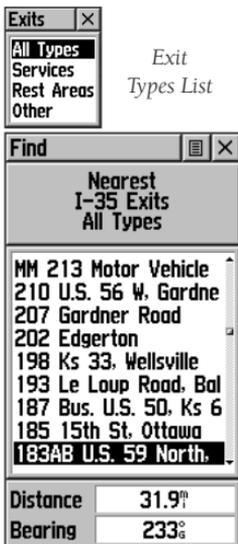

Exits List

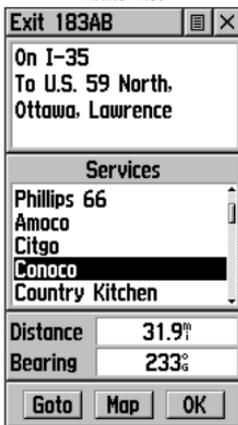

Exit Information Page



Services Information

Finding an Exit - Overview

You can use the Find Exit option to locate a nearby exit on an interstate highway. Exits are listed only by 'Nearest'. Exit information pages provide a variety of information about services near each exit, including rest stops, lodging, restaurants, service stations, etc. Some services (i.e. service stations) on this page can be selected and a separate information page will display with specific information concerning what types of fuel, mechanical and food services are available.

Step-by-Step Instructions

To find an exit:

1. Press the **FIND** button to display the Find Menu.
2. Use the **CLICK STICK** to highlight 'Exits' and then press it in to display the Exit List.
3. Observe the 'pop-up' type options menu and then highlight and select an exit type by pressing in on the **CLICK STICK**.
4. A list of exits nearest to you will be displayed. The title box indicates the interstate highway which is served by the exits. Two fields at the bottom of the page indicate distance and bearing to the exit currently highlighted.
5. Scroll through the list to highlight the desired exit.
6. Press in on the **CLICK STICK** to display the Information Page for that exit. This page contains the exit description at the top of the page with a list of available services near that exit, displayed below. Distance and bearing fields are also displayed.
7. Use the **CLICK STICK** to move to the list of services and highlight a selection from the list.
8. Press in on the **CLICK STICK** to display the Information Page for the selected service.
9. The Exit Services Information Page will display the name of the service, its direction from the exit, and a list of the services available, each marked by a check.
10. At the bottom of these Information Pages are on-screen buttons for Goto, Map, and OK.
11. Use the options menu at the top of the page to save the exit as a waypoint, 'Favorite', project a waypoint, or add to an existing route

Finding a Point of Interest - Overview

You can use the Find Point of Interest option to locate a nearby restaurant, lodging, landmark, public building, park, etc. However, you must have transferred a Map-Source MetroGuide map to the unit map database, otherwise this option, plus Address and Intersection options will appear gray and will not be functional.

Here is a list of Point of Interest categories:

Food & Drink	Shopping
Lodging	Services
Attractions	Transportation
Entertainment	Emergency & Govt.

In many instances, these categories are subdivided into types, such as in the instance of Food & Drink. When you select Food and Drink from the list of categories you are then presented with a list of types which includes 'All Types' and cuisine options like American, Asian, Barbecue, Chinese and many more. When you select restaurant that is part of a national chain (for example McDonalds) the name will appear only once. However, when you highlight it and press in on the **CLICK STICK**, a list of 'Nearest' locations for that name will appear.

Once you have selected an item, press in on the **CLICK STICK** to display the Information Page for that item. You can then use, on-screen buttons to 'Goto', view the location on the 'Map', or the option menu to add to a list, route, or save as a waypoint.

Step-by-Step Instructions

To find a point of interest:

1. Press the **FIND** button to display the Find Menu.
2. Use the **CLICK STICK** to highlight 'Points of Interest' and then press it in to display the Points of Interest Categories List.
3. Use the **CLICK STICK** to select the desired category and then press it in to display the Types List.
4. Use the **CLICK STICK** to select the desired type and then press it in to display the list for that type.


The Find Menu



Points of Interest List



Food & Drink Categories

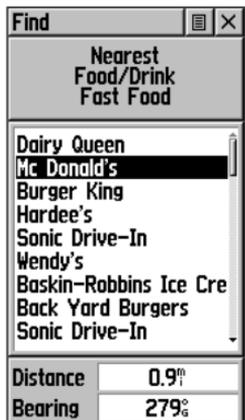

Nearest Fast Food List

The Find Menu

Point of Interest	
Food/Drink	
Fast Food	
Mc Donald's	
1600 S Hamilton Cir Olathe, KS 66061 913-780-5945	
Distance	0.9 ^m
Bearing	279°
<input type="button" value="Goto"/> <input type="button" value="Map"/> <input type="button" value="OK"/>	

Point of Interest Info Page

Find Address	
Number	
15727	
Street	
W Beckett Ln	
City (optional)	
Olathe, KS	
Postal Code (optional)	
Matches (3)	
15727 W Beckett Ln Olathe, KS 66062	
Match Quality 100%	

Find Address Page

Find Address	
Number	
<input type="text"/>	
1	2 3 -
4	5 6 +
7	8 9 (optional)
0	← ↓
<input type="button" value="OK"/> <input type="button" value="de (optional)"/>	

Entering an Address

To find a point of interest: (continued)

- Use the option menu at the top of page to select from either 'By Name' or 'Nearest' options. Selecting 'By Name' displays a keyboard allowing you to enter the characters of the name you want. When enough characters are entered a list of matches is displayed.
- Use the **CLICK STICK** to highlight your selection from the list and then press it in to display the Information Page for that item.
- Use the on-screen buttons to 'Goto' or view on the 'Map', or the page options menu to add the item to a list, save as a waypoint or add the item to an existing route.

Finding an Address or Intersection - Overview

You can enter a street number, choose a street name from a list and find an address within the area of map data coverage. You enter two street names and locate the point where they intersect. However, you must be using a MapSource MetroGuide which provides this type of map data, otherwise this option will not be available.




Step-by-Step Instructions

To locate an address:

- Press the **FIND** button to display the Find Menu.
- Use the **CLICK STICK** to highlight 'Address' and press it in to display the 'Find Address' page.
- Highlight the 'Number' field and use the keyboard for entering numbers.
- Move to the 'Street' field using the **CLICK STICK**.
- Press in on the **CLICK STICK** to display the 'Select Street Name' list. Find the street by using the keyboard to enter characters until a list appears.
- With the desired street highlighted, press in on the **CLICK STICK** to place the street name on the Find Address page. Repeat this process for city and postal codes, if desired. A window at the bottom of the page displays a list of matches and the quality of each match.
- Use the on-screen buttons at the bottom of the page to Goto, view the item on the Map, or OK to close.
- Use the Options Menu to: Add To Favorites, Add To Route, Project a Waypoint, Save as Waypoint, View Sun and Moon, or Hunt & Fish.

To locate an intersection:


1. Display the Find Menu and use the **CLICK STICK** to highlight the 'Intersection' category and press it in to display the 'Find Intersection' page.
2. Highlight the first 'Street' field and then press in on the **CLICK STICK** to display the 'Street' list.
3. Enter the name of the street in the name field at the top of list using the keyboard data entry method. Once you have spelled enough of the street name, you will get a match with several on the list. Press in on the **CLICK STICK** to move the highlight to the street list and then scroll up or down until you find the street name you want. Press it in to place the name in the field.
4. Repeat the process to select the second street name and for city and postal codes, if desired.
5. A window at the bottom of the page displays a list of matches and the quality of each match, allowing you to choose the most likely intersection. If no match is found, it is likely that no such intersection exists.
6. Highlight the best match and then press in on the **CLICK STICK** to display the Information Page for the intersection. Use the on-screen buttons at the bottom of the page to Goto, view the item on the Map, or OK to close.
7. Use the Options Menu to: Add To Favorites, Add To Route, Project a Waypoint, Save as Waypoint, View Sun and Moon positions, or Hunt and Fish for viewing best hunting and fishing times.

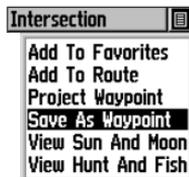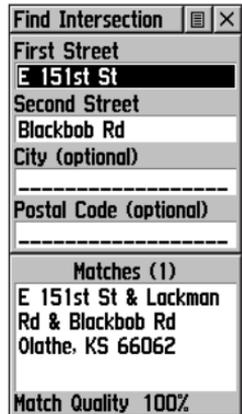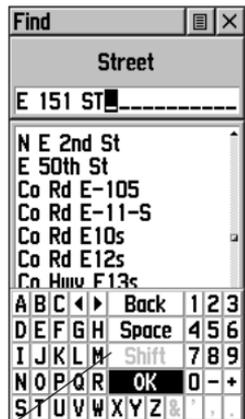*Information Page Options***The Find Menu***Find Intersection Page**Find Street Keyboard Entry*


Using a Goto



Information Page

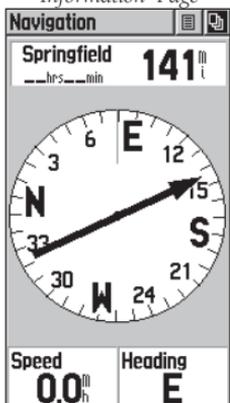

Navigation Page

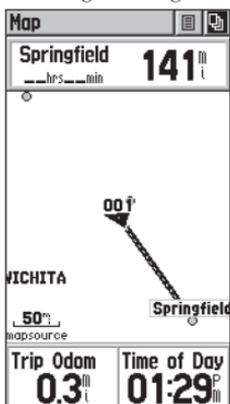

A Goto on the
Map Page

Using a Goto to Navigate to a Destination

The Goto function allows you to create a direct route to a destination, (waypoint, city, or point of interest). Once you have accessed the Information Page for an item, use the Goto button at the bottom of the page to initiate travel to a map item using the Map and Navigation Pages for guidance.

To activate a Goto:

1. Use the Find Menu to access the Information Page for any desired destination and use the **CLICK STICK** to highlight the Goto button.
2. Press in on the **CLICK STICK** to start navigation.
3. Observe the Navigation Page, it will display the name of your destination, the distance from your current location, and a Bearing Pointer indicating the direction you should travel. The time require to reach your destination will display when you begin to travel and establish a predicted rate of movement. The Data Fields at the bottom of the page will display information relative to your travel as appropriate for the type of data selected to appear in those fields.
4. Use the **PAGE** button or Main Page Menu to access the Map Page and observe your movements and a dark line indicating the direct path from your current location to your destination.
5. Use the Bearing Pointer on the Navigation Page to maintain travel in the right direction and observe distance and time information to monitor your progress.
6. When you are close to your destination, an "Arriving at Destination" message will appear. If you move past the destination the Bearing Pointer will reverse and the distance display will begin to increase.
7. To stop navigating, highlight the on-screen Options Menu button at the top of the Navigation or Map Page and press in on the **CLICK STICK**. Select 'Stop Navigation', then press in on the **CLICK STICK**.

Creating and Using a Route - Overview

Route navigation allows you to create a sequence of intermediate waypoints which lead you to your final destination. The eTrex Vista will store 20 routes, each with up to 50 waypoints. A route can be created and modified from the Route Page, waypoints can be added to a route from Find Menu. More complex routes can be created using a PC and MapSource mapping programs and then transferred to the unit memory. You can add a waypoint or map item to an existing route at any time.

Step-by-Step Instructions

To create a route:

1. Access the 'Routes' page from the Main Menu. The page has a 'New' button, a list of routes, and the number of unused routes.
2. Use the **CLICK STICK** to highlight the 'New' button and press it in to display the route Setup page.
3. With an empty row (dashed) in the route list highlighted, press in on the **CLICK STICK** to display the Find Menu.
4. Use the Find Menu to select a route waypoint from one of the Find Menu categories and display the Information Page for selected waypoint, city, exit, point of interest, etc. Highlight the on-screen 'OK' button and press in on the **CLICK STICK** to place it on the Routes List.
5. To add more waypoints to the route, repeat the process in Steps 3 and 4. The route will be named for the first and last waypoints on the route.

You can add waypoints to the end of an existing route at any time by using the Find Menu.

To add a Find Menu item to a route:

1. Select an item from the Find Menu and display its Information Page.
2. Display the page Options Menu and select the 'Add To Route' option to display the Routes List.
3. Highlight and select the route desired and then press in on the **CLICK STICK**. A 'Waypoint Added Successfully' message will appear.


Routes



The Routes Page with a list of Routes and the number of Unused Routes.




A Route with list of waypoints.

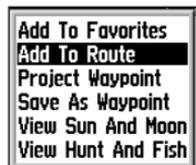

"Add To Route" option from the Find Menu Information Pages

Routes

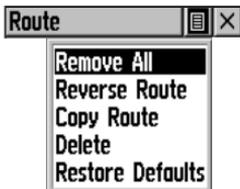

A Route Options Menu



Routes List With Two Copied Routes
Original Route has a '1' Suffix



Delete Route Prompt

Editing a Route

To remove all waypoints:

1. Select the on-screen page options button from the Route Page and press the **CLICK STICK** in to access the options menu.
2. Highlight the 'Remove All' option and then press in on the **CLICK STICK** to remove all waypoints from the list. You will be prompted, "Do you really want to remove all waypoints from the route?", select "Yes".

To reverse the route:

1. Select the on-screen page options button from the Route Page and press the **CLICK STICK** in to access the options menu.
2. Highlight the 'Reverse Route' option and then press in on the **CLICK STICK** to reverse the order of waypoints in the list. To change the route back to the original order, repeat this process.

To copy the route:

1. Select the on-screen page options button from the Route Page and press the **CLICK STICK** Down to access the options menu.
2. Highlight the 'Copy Route' option and then press in on the **CLICK STICK** to copy. The copied route will appear on the Routes Page and the original route will be named the same but followed by a numeral 1. You may then rename and/or modify the copied route.

To delete the route:

1. Select the on-screen page options button from the Route Page and press the **CLICK STICK** Down to access the options menu.
2. Select 'Delete' and then press in on the **CLICK STICK**. You will be prompted, "Do you really want to delete route?". Select "Yes".

To restore default settings for the route:

1. Select the on-screen page options button from the Route Page and press the **CLICK STICK** in to access the options menu.
2. Select 'Restore Defaults' and then press in on the **CLICK STICK** to restore factory settings.

Editing a Route *(Continued)***To review a waypoint:**

1. Select the waypoint from the Route Waypoints List and press the **CLICK STICK** in to access the options menu for the waypoint.
2. Highlight 'Review' and then press in on the **CLICK STICK** to display the Information Page for the waypoint.
3. Highlight the on-screen 'OK' button and then press in on the **CLICK STICK** to return to the Route List.

To insert a new waypoint on the route list:


1. Select the row that you want the new waypoint inserted. Press the **CLICK STICK** in to access the options menu.
2. Highlight 'Insert' and press in on the **CLICK STICK** to display the Find Menu and select a new waypoint, city, exit, point of interest, etc.
3. With the new waypoint highlighted, press in on the **CLICK STICK** to display the Information Page for the new waypoint and then select the on-screen 'OK' button to add it the route.

To remove a waypoint from the route list:

1. Select the waypoint that you want to remove from the Route Waypoints List and press in on the **CLICK STICK** to display the options menu for the waypoint.
2. Highlight 'Remove' and press in on the **CLICK STICK** to remove the waypoint from the list.

To change a route waypoint:

1. Select the waypoint that you want to change from the Route Waypoints List and press in on the **CLICK STICK** to display the options menu for the waypoint.
2. Highlight 'Change' and press in on the **CLICK STICK** to display the Find Menu or create a new waypoint and add it to the Waypoints list.
3. Select a new waypoint, access its Information Page and press the on-screen 'OK' button to replace the old route waypoint

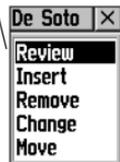RoutesRoute Page with
Waypoint ListRoute Waypoint
Options MenuUsing the Find Menu to
change a Route Waypoint


Routes



Moving a Route Waypoint
by clicking and dragging.



Map Page Route Options

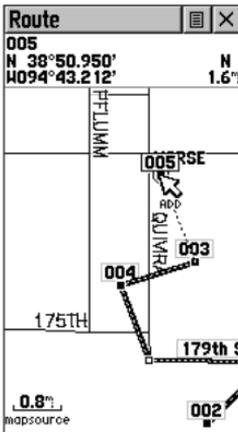

Adding a Route Waypoint
to an end point on the
Route Map Page

To move a route waypoint:

1. Select the waypoint from the Route Waypoints List and press the **CLICK STICK** in to access the options menu for the waypoint.
2. Highlight the 'Move' option and press in on the **CLICK STICK** to display the waypoint on the map.
3. Use the **CLICK STICK** to move the panning arrow to the waypoint and then press it in to activate the 'Move' feature (a 'Move' note will appear by the waypoint).
4. Use the **CLICK STICK** to drag the waypoint to the new location and then press it in to place it.

Adding or Editing a waypoint from the Route Map Page

You can use the panning arrow with the Route Map Page displayed to add or edit route waypoints.

To add a route waypoint at either end of a route:

1. Select the Route from the Routes List and press the **CLICK STICK** in to display the Route Page
2. Highlight the on-screen Map button at the bottom of the page and press in on the **CLICK STICK** to display the Route Map Page.
3. Use the **CLICK STICK** to move the panning arrow to either end of the displayed route until the end waypoint is highlighted. Then press it in to display the map options menu and select 'Add Turns'. This option appears only when highlighting the end point of a route.
4. Move the panning arrow to a map item or location where you would like to extend the route and press in on the **CLICK STICK** to display the Information Page for the new waypoint. Press the on-screen 'OK' button to return to the map page and then press it in again to place the new waypoint.

To add a route waypoint within a route:

1. Follow steps 1 and 2 in the previous instruction.
2. Use the **CLICK STICK** move the panning arrow to a route line. When the arrow touches the line, the line will become thin. Press in on the **CLICK STICK** to display the word 'ADD' next to line.

- Next drag the line to a map item or other location where you want to establish a new waypoint and then press in on the **CLICK STICK** to place the new waypoint. A waypoint information page will display. Press the on-screen 'OK' button to save the new waypoint, then press it again after returning to the Route Map.

To review, or remove a route waypoint:

- Select the Route from the Routes List and press the **CLICK STICK** in to display the Route Page.
- Use the **CLICK STICK** to highlight the desired route and press in to display the Route Page for that route.
- Use the **CLICK STICK** to move the map panning arrow to the waypoint you want to review and press in to pop-up the options menu. Select 'Review' or 'Remove' and press in again to either display the Information Page for that waypoint or remove it from the route.

To view the next waypoint in the route:

- Follow Steps 1 and 2 above.
- Place the map panning arrow on the waypoint you are currently viewing and press in to display the options menu. Select 'Next' and press in again to view the next waypoint which will be centered on the page.

Navigating a Route

A Route can be navigated using the Map Page or the Navigation Page. The Map Page displays your movement, the route line and waypoints on the route. The Navigation Page provides compass direction and a bearing pointer.


To navigate a route:

- Select a route from the Routes List and then press in on the **CLICK STICK** to display the Route Page.
- Highlight the on-screen 'Navigate' button at the bottom of the page and then press in on the **CLICK STICK** to begin navigating the route.
- Observe that you have moved to the Navigation Page.
- Move to the Map Page and observe the route displayed on the map and the position icon indicating your current location.
- Begin moving and observe directional information on the Navigation Page and your progress on the Map Page.
- To stop navigation use the 'Stop Navigation' option on either page or the 'Stop' button on the Route Page.


Routes



Adding a new waypoint within a Route

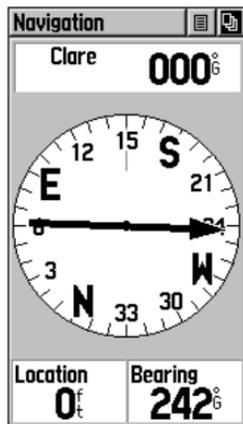


Navigation Page with Bearing Pointer

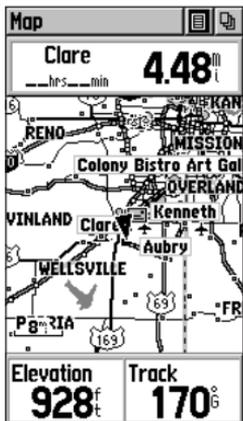

Navigating a Route on the Map Page

Routes

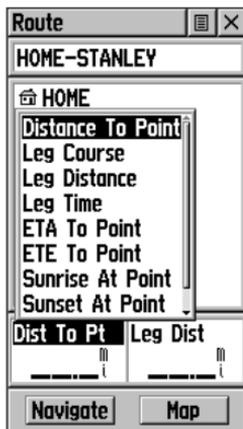

Data Field Options Menu



Distance to Point vs Leg Distance. To view Leg information, highlight the end waypoint on a leg.

Data Fields for the Route Page

When navigating a Route, the data displayed in the data fields on Route Page may be customized to provide useful navigation information that is specifically related to route navigation. These data options appear only on the Route Page,

Options for this type of navigation are:

Distance to Point - The distance from your current location to a route waypoint.

Leg Course - The line of travel between two route waypoints.

Leg Distance - The distance between two route waypoints.

Leg Time - The time required to travel from a route waypoint to the next.

ETA To Point - Estimated Time of Arrival at a route waypoint (in sequence).

ETE To Point - Estimated Time Enroute to a route waypoint.

Sunrise At Point - Time of sunrise at a route waypoint.

Sunset At Point - Time of sunset at a route waypoint.

Pointer - Direction pointer to a route waypoint.

To select data field options:

1. Use the **CLICK STICK** to highlight the data fields on the Route Page and then press in to display the Data Field Options Menu.
2. Use the **CLICK STICK** to highlight the desired option and then press in to enter the option in the data field.

Using Track Logs - Overview

The eTrex Vista draws an electronic bread crumb trail on the Map Page as you travel along. This bread crumb trail is the 'Track Log'. The Track Log contains information about points along its path, including time, and position. The eTrex Vista can use this information to allow you to navigate using the saved track.

The 'TracBack' feature allows you to return along a traveled path without marking any waypoints. When you are ready to return to where you started, the eTrex Vista will take you back by following the 'Track Log' that you left behind. You can save a total of ten tracks in the unit memory. The Track Log starts recording as soon as the unit gets a satellite location fix and the Track Log feature is turned on. When you no longer need a Track Log you can press the on-screen 'Clear' button to remove it. This also removes the Track Log Pressure or Elevation Plot.


If you want to keep a record of a certain Track log or use the 'TracBack' feature, it is recommended that you clear the Track Log before you start traveling. The percentage of memory used by the current track log is displayed in a window at the top of the page. After the Track Log is 'Cleared', it will show zero percent. When the display reaches 100%, the most recent track points will start overwriting the least recent. To avoid losing track points you want, save the Track Log when it approaches the 99% mark.

The Saved Track Page displays the track and it can also be displayed on the Main Map Page as you navigate.


The 'TracBack' feature allows you to retrace your track in both directions. Tracks are marked BEGIN and END.

You can set the track recording interval to Distance, Time, or Automatic. You can set the Track display resolution to High, Medium, Low, and Lowest. You can also use the options menu to delete all saved tracks.

Tracks Page

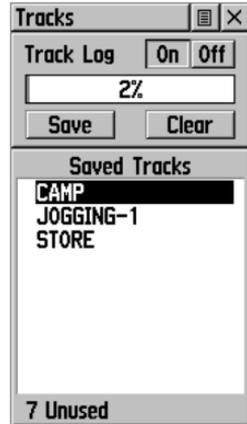


Tracks Page

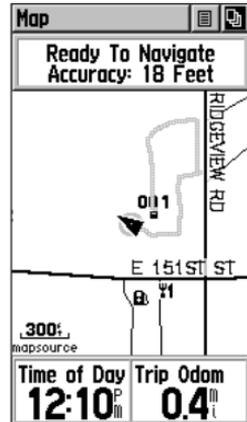

Track on Main Map Page

For effective use of the "TracBack" feature, clear the Track Log before starting a new trip or after saving the Track Log. Rename saved Track Logs to help identify them later.


Tracks Page

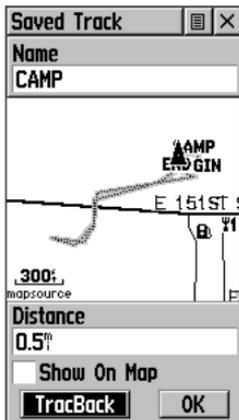

Saved Track Page



Save Track Options

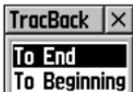

TracBack Options



Track Log Setup Menu



Record
Method
Options

If you choose Auto-record, you can set the recording interval from More to Least Often. You can set recording intervals for Time or Distance as desired.

Step-by-Step Instructions

To save and use a Track Log:

1. Access the 'Tracks' page from the Main Menu. The page has On/Off buttons, a list of tracks, and the number of unused tracks.
2. You can press in on the on-screen 'Off' button to pause track logging. When track logging is active the 'On' button will appear to be recessed.
3. Highlight the 'Save' on-screen button and then press in on the **CLICK STICK** to display the track log 'Save Back Through' list.
4. Use the **CLICK STICK** to select the time and date that you would like to save the track through.
5. Press in on the **CLICK STICK** to save the track log and display the Track Page.
6. The Track Page shows the track name (which can be renamed using the keyboard for data entry), the total distance of the track, the number of points along the track, a 'Show on Map' option with check box, and on-screen buttons for 'Map', 'OK', and 'TracBack'.
7. To enable the Tracback feature, highlight the 'Tracback' button and then press in on the **CLICK STICK**. This will display the Tracback Menu with two options, 'To Beginning' and 'To End'. Highlight the desired option and then press in on the **CLICK STICK** to enable. Access the Map Page or the Navigation page to navigate the Track.

To use Track Log Setup options:

1. Highlight the Tracks Page Options Menu button at the top of the page and press in on the **CLICK STICK** to display the menu.
2. Highlight the 'Tracks Log Setup' option and then press in on the **CLICK STICK** to display the Setup page. You can check the 'Wrap When Full' option by highlighting and then pressing in on the **CLICK STICK**. You can highlight the 'Record Method' and 'Interval' fields and press in on the **CLICK STICK** to display their options. 'Interval' options will change to accommodate the 'Record Method' choices.

The Setup Pages - Overview

The Setup Pages allow you to customize your eTrex Vista to your personal preferences. You can choose Time settings, Units of Measure, Display backlighting and contrast settings, Heading measurement, Interface options and System operating mode.

By highlighting the icons on the Setup Menu and then pressing in on the **CLICK STICK**, you can display the Setup Page for each of the menu items.

Time Page - Overview

You can set the time to match your location or for a projected location anywhere in the world.

Time Format - Allows you to choose from 12 or 24 hour time format. When you select the 12 hour time format, the clock will read like a standard clock with 12 hour AM and PM cycles. The 24 hour option sets the clock to display a 24 hour cycle (Military Time).

Time Zone - Can be set to one of the eight US Time Zones, or 24 International Time Zones (nearest city or geographical region) When selecting 'Other' you can enter the UTC Time Offset for any other time zone. Refer to the instructions for setting the UTC Time Offset on page 62 of the Appendices.


Daylight Savings Time - Can be turned On or Off or set to Automatic.

Step-by-Step Instructions


To set the time:

1. Use the **PAGE** button to access the Main Menu.
2. Use the **CLICK STICK** to highlight the Setup Icon and then press it in to display the Setup Menu.
3. Use the **CLICK STICK** to highlight the Time icon and then press it in to display the Time Page.
4. Use the **CLICK STICK** to highlight the 'Time Zone' field then press it in to display the list of time zone options.
5. Highlight a time zone from the list of 8 U.S. time zones or 24 international time zones (defined by nearest city or geographically) and then press in on the **CLICK STICK**.
6. Observe the correct time displayed at the bottom of the page.

Setup Pages

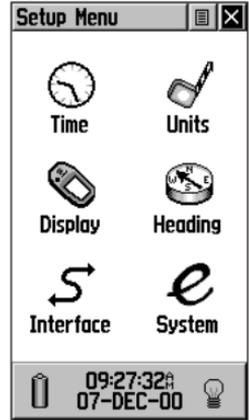

Setup Menu

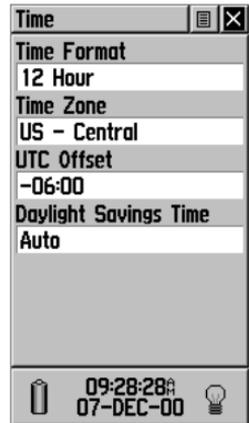

Time Setup Page




Time Format Options



Time Zone Options

Setup Pages

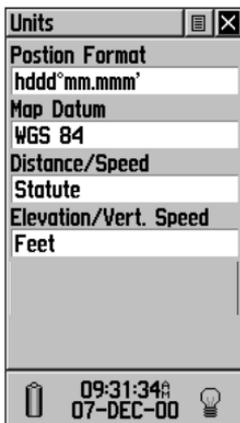

Units Page



Position Format
Options Menu



Map Datum
Options Menu



Distance/
Speed
Options



Elevation/
Vertical
Speed
Options

Units Page - Overview

The Units features are best used by individuals with a working knowledge of map grids and datums. To learn more about these subjects, visit the National Imagery and Mapping Agency at <http://www.nima.mil> or inquire at your library.

Position Format - Allows you to choose from different grid formats. The default position format, 'hddd°mm.mmm' displays the latitude and longitude in degrees and minutes and is most commonly used.

Map Datum - Offers a selection of nearly all map datums in common use. Every map is based on a map datum (a reference model of the earth's shape) and is usually listed in the title block of the map. If you are comparing GPS coordinates to a paper map, chart, or other reference, the map datum in this field must match the horizontal map datum used to generate the map or other reference. The default datum is WGS 84 (World Geodetic Survey 1984) and should only be changed when using maps or charts specifying a different datum. If a map does specify a datum, use the options list to find datums applicable to the region of the map, selecting the one that provides the best positioning at a known point. You may also choose the 'User' datum for custom designed grids.

Distance/Speed - You can choose from three units of measure to display your rate of travel.

Elevation/Vertical Speed - You can choose from two units of measure to record your elevation and rate of ascent.

Step-by-Step Instructions

To select Units Page options:

1. For all fields on this page, highlight the field and then press in on the **CLICK STICK** to display the options menu for the field.
2. Highlight the desired option on the menu and then press in on the **CLICK STICK** to place it in the field.

Display Page - Overview

You can adjust the amount of time that the backlighting feature stays on before timing out and adjust the screen contrast for best viewing

Backlighting Timeout - Allows you to choose from always On, to delays of 15 seconds, 30 seconds, one, or two minutes before timing out.

Contrast Adjustment - Can be adjusted from light to dark using the slider adjacent to the contrast bar.

To set the backlighting timeout:

1. Highlight the Backlight Timeout field and then press in on the **CLICK STICK** to display options.
2. Highlight the desired option and then press in on the **CLICK STICK** to activate it.

To adjust the contrast:

1. Highlight the contrast slider and then press in on the **CLICK STICK** to activate.
2. Move the **CLICK STICK** Up or Down to move the contrast slider until the desired contrast has been set.

Heading Page - Overview

You can select from three types of heading displays, and four types of North References and enter the magnetic variation when selecting a 'User' reference.

Display - Allows you to choose from Cardinal Letters, Degrees or Mils.

North Reference - You can choose from True, Magnetic, Grid or User options. If 'User' is chosen you must correct for the Magnetic Variation using data entry techniques. The Electronic or GPS compass will use the North Reference setting to create a bearing.


To select Display and North Reference options:

1. Highlight the field and then press in on the **CLICK STICK** to display the options.
2. Highlight the option and press in on the **CLICK STICK** to activate.

To set GPS and Electronic Compass Switch:

1. Highlight the field you want to set and use the numerical keyboard to enter the desired value.


Setup Pages

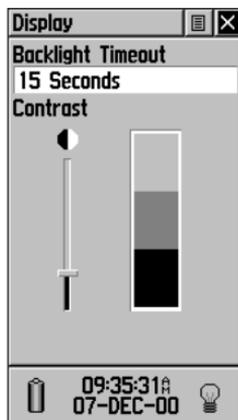

Display Page



Backlight
Timeout
Options

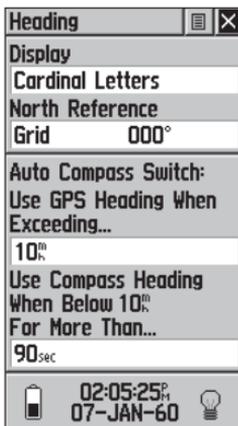

Heading Page




North Reference
Options

Setup Pages



*GARMIN Mode
with No Options*

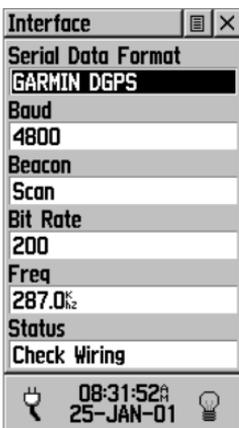

*GARMIN Differential GPS
Mode
with Data and Options
Fields*

Interface Page - Overview

The Interface Settings Page allows you to choose from seven different input/output serial data formats, or, none at all. This feature is used when connecting your eTrex Vista to external NMEA devices, a DGPS beacon receiver, a personal computer, etc. For effective use of this feature it is necessary to have a working knowledge of these applications. Following is a description of each format:

GARMIN - The proprietary format used to exchange waypoint, track, and map data with a PC.

GARMIN DGPS - Allows DGPS input using a GARMIN beacon receiver and a standard RTCM SC-104 and DGPS tuning.

NMEA Out - Supports the output of standard NMEA 0183 version 2.3 data.

Text Out - Allows simple ASCII text output of location and velocity information, without any input capabilities.

RCTM In - Allows DGPS input using a standard RCTM SC-104 format without any output capabilities.

RCTM In/NMEA Out - Allows DGPS input using a standard RCTM SC-104 format and supports the output of standard NMEA 0183 version 2.3 data.

RCTM In/Text Out - Allows DGPS input using a standard RCTM SC-104 format and simple ASCII text output of location and velocity information.

None - Provides no interfacing capabilities.

If 'GARMIN DGPS' or 'RCTM in/NMEA Out' format is selected, additional fields are provided to control a GARMIN differential beacon receiver (e.g. GBR 21 & GBR 23) directly from your unit. Tuning is automatic with 'Scan' or you can enter the beacon frequency and bit rate when you select 'User' from the Beacon list to manually tune the receiver. Refer to the beacon receiver instructions.

Step-by-Step Instructions

To select a serial data format:

1. Highlight the Serial Data Format field and then press in on the **CLICK STICK** to display options.
2. Highlight the desired option and then press in on the **CLICK STICK** to activate it.
3. If you selected a format that displays additional fields, highlight those with options and make your selection using the **CLICK STICK**.

System Page - Overview

The System Setup Page allows you to select from three modes of operation 'Normal', 'Battery Saver', and 'Use With GPS Off'.

Of the GPS options, the 'Battery Saver' or 'Use With GPS Off' will significantly save battery power. The 'Battery Saver' mode reduces the rate of satellite signal position updating and the 'Use With GPS Off' option stops satellite signal reception altogether.

This Page Option Menu also displays the current version of unit operating software and the Internal Serial Number. The path for downloading software updates from the GARMIN website is (www.garmin.com). Downloading updates requires use of the GARMIN PC Interface Cable, supplied with this unit. Instructions are posted at the website.

You can use the Wide Area Augmentation System (WAAS) capability of the eTrex Vista to produce a more accurate position fix (3 meters nominal). When enabled, this feature searches for a WAAS satellite near your location and then receives data for correcting differentials in the GPS satellite signals. When WAAS has been enabled, you will see WAAS satellite numbers, beginning at No. 33 or above, displayed on the Satellite Page. When differential correction data has been received for GPS satellites (numbers 32 or below), a 'D' will appear in the signal bar beneath the skyview. It is helpful to orient the unit antenna toward the WAAS satellite shown in the skyview. To learn more about the WAAS System, its satellite positions and current state of development, access the Federal Aviation Administration website (<http://gps.faa.gov/>). Refer to the Trouble Shooting Guide on page 65 if WAAS access and differentials are not obtained.

You can turn the Electronic Compass On and Off and turn Automatic Calibration for the Altimeter On and Off.


The bottom of this page, are the Amount of Memory Used, Power Status, Date and Time and Backlighting Status.

Step-by Step Instructions


To select System Page options:

1. Highlight the field and then press in on the **CLICK STICK** to display the options.
2. Highlight an option and press in on the **CLICK STICK** to activate.

Setup Pages

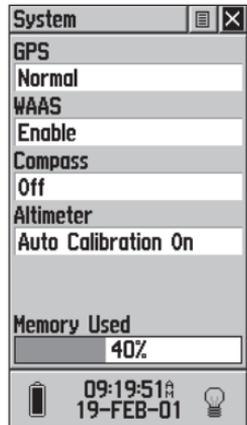

System Setup Page in Normal Mode, WAAS Enabled, Compass Off and Altimeter Calibration on Automatic.

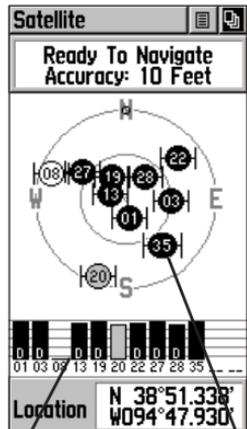


WAAS Enabled. WAAS Satellite is No. 35 and 'D' in Signal Bars for GPS Satellites




System Page Options Menu

Accessory Pages

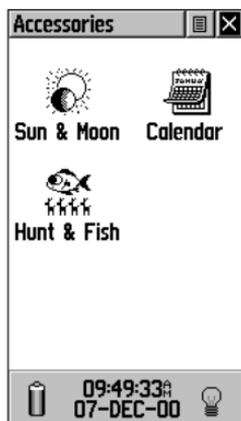


Accessory Menu

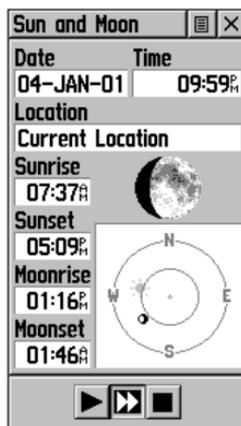

Sun & Moon Page



Location Options List

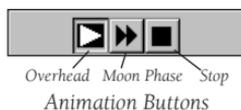

Accessories Menu

There are three accessory pages (features which enhance the unit operation, but are not essential), sun and moon position relative to a location, a calendar displayed by month, and a hunting and fishing best times record. Highlight the appropriate icon and then press in on the **CLICK STICK** to display the desired page.

Sun and Moon - Overview

This feature provides you with a graphic display of both sun and moon positioning for a certain date, time and location with times for sunrise, sunset, moonrise, and moonset.

On-screen buttons at the bottom of this page allow you to animate the movement of the sun and moon and stop it at a given date. The first button on the left animates the overhead display of the sun and moon and you can view positions for any given date by observing the date field and stopping movement when the desired date is displayed. You can also display the different phases of the moon by pressing the center button and then the far right 'stop button' when the desired date appears.

Step-by-Step Instructions

To set the date and time:

1. For the Date and Current Time, highlight each field and then press in on the **CLICK STICK** to begin data entry of individual characters.
2. To display the current date and time, highlight the page Options Menu and press in on the **CLICK STICK** to display the 'Use Current Time' option and then press in on the **CLICK STICK** to activate.

To set the location:

1. Highlight the Location field and then press in on the **CLICK STICK** to display the 'New Location' options list.
2. Highlight the option desired and then press in on the **CLICK STICK** to activate. If you choose 'Current Location' the field values displayed on the page will reflect the view from your current location. If you choose 'Use Map', a map page will display. Use the map pointer to identify the desired location and then press in on the **CLICK STICK**. If you choose 'Use Find Menu' follow instructions for using the Find Menu on page 37.

Calendar - Overview

This feature provides you with a monthly calendar with programmable reference notes dates. You can display one monthly calendar of days at a time and mark days on each with reference notes using the data entry keypad. You can create reference notes for multiple months and for months years in yet to come. You can record 100 notes with up to 18 characters each.

Step-by-Step Instructions

To set the month and year:

1. For the month, highlight the month field and then press in on the **CLICK STICK** to begin to enter new data using the data entry keyboard.

To create a reference note:

1. Use the **CLICK STICK** to highlight the day of the month and then press in to display the options menu for the date.
2. Highlight and select 'New Note' to begin entering text from the keyboard.
3. Observe the message as it is created in the message block below the keyboard.
4. To edit or delete a note previously created, highlight the date and press in on the **CLICK STICK**. You will be presented with 'Edit Note', 'Delete Note', 'View Sun and Moon', or 'View Hunt and Fish' options.


Accessory Pages



Calendar Page



Calendar Page Options

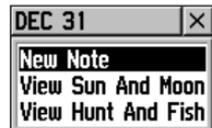

Calendar Date Options



Calendar Page Keyboard and Message Block

Accessory Pages

Hunt & Fish	
Date	07-MAR-01
Location	
Current Location	
Prediction	
Good Day	
Best Times	09:29 ^{AM} — 11:29 ^{AM} 09:50 ^{AM} — 11:50 ^{AM}
Good Times	03:18 ^{AM} — 04:18 ^{AM} 03:40 ^{AM} — 04:40 ^{AM}

Hunt & Fish Page

New Location	
Current Location	
Use Map	
Use Find Menu	

'New Location' Options

Hunt and Fish - Overview

This feature provides you with a listing of best times for hunting and fishing for a chosen location and date.

Step-by-Step Instructions**To set the date:**

1. Highlight the date field and then press in on the **CLICK STICK** to begin data entry of individual characters. To display the current date, highlight the page Options Menu and press in on the **CLICK STICK** to display the 'Use Current Date' option and then press in on the **CLICK STICK** to activate.

To set the location:

1. Highlight the Location field and then press in on the **CLICK STICK** to display the 'New Location' options list.
2. Highlight the option desired and then press in on the **CLICK STICK** to activate. If you choose 'Current Location' the field values displayed on the page will reflect the times at your current location.
3. If you choose 'Use Map', a map page will display. Use the map pointer to identify the desired location and then press in on the **CLICK STICK**.
4. If you choose 'Use Find Menu' follow instructions for using the Find Menu on page 37.



NOTE: The times displayed are the recognized best and good times for hunting and fishing. But, be certain that they are not in conflict with state and local game laws which may vary from location to location. It is your responsibility to know and abide by these laws.

Appendix A Specifications

Physical

Case:	Fully-gasketed, high-impact plastic alloy, waterproof to IPX7 standards (waterproof to one meter for 30 minutes)
Size:	4.4" H x 2" W x 1.2" D
Weight:	Approx. 5.3 ounces (150g) w/batteries
Temperature Range:	5° to 158°F (-15° to 70°C) ³ (operating)

Performance

Receiver:	Differential-ready, 12 parallel channel
Acquisition time:	Approx. 15 seconds (warm start) Approx. 45 seconds (EZinit/cold start) Approx. 5 minutes (First Time/AutoLocate™)
Update Rate:	1/second, continuous
GPS Accuracy:	<15 meters (49 ft) RMS, 95% typical ²
DGPS (USGC) Accuracy:	3-5 meters (10-16 ft), 95% typical with DGPS corrections ¹
DGPS (WAAS) Accuracy:	<3 meters (10 ft), 95% typical with DGPS corrections
Velocity Accuracy:	0.05 meter/sec steady state
Dynamics:	Performs to specifications to 6 g's
Interfaces:	NMEA 0183, RTCM 104 (for DGPS corrections) and RS-232 for PC interface
Antenna:	Built-In patch

Power

Input:	Two 1.5-volt AA batteries ⁴
Power Consumption:	0.5 watts max.
Battery Life:	Up to 12 hours of typical use in 'Battery Saver' mode ⁵

Specifications subject to change without notice.

¹With optional GARMIN Differential Beacon Receiver Input (such as GARMIN GBR 21 or 23).

²Subject to accuracy degradation to 100m 2DRMS under the U.S. DoD-imposed Selective Availability program.

³Subject to proper user calibration

⁴The temperature rating for the eTrex Vista may exceed the usable range of some batteries. Alkaline batteries can rupture at high temperatures. External power can only be applied using the GARMIN Auto Power Adapter (P/N 010-10203-00) or PC Interface Cable with Auto Power Adapter (P/N 010-10268-00). These cables contain a 12 VDC to 3 VDC voltage regulator. Modifications or other applications will void the product warranty.

⁵Alkaline batteries lose a significant amount of their capacity as temperature decreases. Use lithium batteries when operating the eTrex Vista in below-freezing conditions. Extensive use of screen backlighting and the electronic compass will significantly reduce battery life. Different brands of batteries will vary in performance.

Appendix B Time Offset Chart

The table below gives approximate UTC time offset for various longitudinal zones. If you are in daylight savings time, add one hour to the offset.

Longitudinal Zone	Offset	Longitudinal Zone	Offset
W180.0° to W172.5°	-12.00	E007.5° to E022.5°	+01.00
W172.5° to W157.5°	-11.00	E022.5° to E037.5°	+02.00
W157.5° to W142.5°	-10.00	E052.5° to E067.5°	+03.00
W142.5° to W127.5°	-09.00	E067.5° to E082.5°	+04.00
W127.5° to W112.5°	-08.00	E082.5° to E097.5°	+05.00
W112.5° to W097.5°	-07.00	E097.5° to E112.5°	+06.00
W097.5° to W082.5°	-06.00	E112.5° to E122.5°	+07.00
W082.5° to W067.5°	-05.00	E122.5° to E127.5°	+08.00
W067.5° to W052.5°	-04.00	E127.5° to E142.5°	+09.00
W052.5° to W037.5°	-03.00	E142.5° to E157.5°	+10.00
W037.5° to W022.5°	-02.00	E157.5° to E172.5°	+11.00
W022.5° to W007.5°	-01.00	E172.5° to E180.5°	+12.00
W007.5° to E007.5°	-00.00		

A simple way to determine your local time offset is how many hours you are behind or ahead of UTC (also called 'Greenwich' or 'Zulu' time) Example: EST (Eastern Standard Time) is 5 hours behind UTC, so your offset would be -5. Adding one hour for daylight savings would make EDT (Eastern Daylight Time) -4. Subtract an hour for each time zone as you travel west.

Offsets for Continental U.S. would be:

EST: -5	EDT: -4
CST: -6	CDT: -5
MST: -7	MDT: -6
PST: -8	PDT: -7

Standard Accessories

Carry Lanyard..... Part No. 013-00052-00

Provides convenient method for carrying the eTrex Vista. Attaches to a slot on the bottom of the unit. *(Not shown)*

PC Interface Cable..... Part No. 010-10206-00

Allows for transfer of data from a PC to an eTrex Vista. (RS232 serial port connector) *(Not shown)*

Owner's Manual..... Part No. 190-00219-00

Quick Start Guide..... Part No. 190-00219-01

Optional Accessories

Automotive Mounting Bracket. Part No. 010-10274-00

Can be temporarily or permanently mounted on the dash.

Handlebar Mounting Bracket... Part No. 010-10267-00

Allows the eTrex Vista to be mounted on bicycle handle bars.

Carrying Case..... Part No. 010-10266-00

Protects the eTrex Vista and permits use while in the case. *(Not shown)*

Carrying Holster..... Part No. 010-10309-00

Allows easy access to the eTrex Vista when clipped on a belt. *(Not shown)*

Cigarette Lighter Adapter..... Part No. 010-10203-00

Provides eTrex Vista operation from a automobile cigarette lighter.

Data Cable..... Part No. 010-10205-00

Wiring harness. Bare wire connections for data input/output. *(Not shown)*

PC Interface Cable/Cigarette Lighter Power

Adapter.....Part No. 010-10268-00

Allows transfer of waypoints and routes from a PC to the eTrex Vista and provides unit operation from an automobile cigarette lighter.

MapSource™ Map Data CD-ROMs

An excellent tool for creating waypoints and routes on your PC using a background map and downloading them to your eTrex Vista. See your GARMIN dealer for MapSource details.

Replacement Battery Cover..... Part No. 011-10529-00

Replacement for lost or damaged battery compartment cover. *(Not shown)*

Appendix C Accessories



Automotive Mounting Bracket



Handlebar Mounting Bracket



Cigarette Lighter Power Adapter-Converts 12VDC output from the lighter to 3VDC input to the eTrex Vista. Not interchangeable with power adapters for GARMIN VHF 720, 725, and 725e, or GPS 170, 175, 190, and 195.



PC Interface with Cigarette Lighter Power Adapter Also non-interchangeable with the GARMIN power adapters mentioned above.

Appendix D Wiring Diagram

Interface formats are selected from the Setup 'Interface Page' on page 44 of this manual. The input/output lines on your eTrex Vista unit are RS-232 compatible, allowing easy interface to a wide range of external devices, including PCs, differential beacon receivers, marine autopilots and /or a second GPS receiver.

The NMEA 0183 version 2.3 interface format is supported by the eTrex Vista and enables the unit to drive up to three NMEA devices.

NMEA 0183 Version 2.3 Approved Sentences:

GPGGA, GPGLL, GPGSA, GPGSV, GPRMB, GPRMC, GPRTE, GPWPL, GPBOD


GARMIN Proprietary Sentences:

PGRME (estimated error), PGRMZ (altitude), PSLIB (beacon receiver control)

DGPS (Differential GPS) corrections are accepted in RTCM SC-104 version 2.0 format through the 'Data In' line. The GARMIN GBR 21 is the recommended beacon receiver for use with the eTrex Vista. Other beacon receivers with the correct RTCM format may be used, but may not correctly display status or allow tuning control from the GPS unit.

The eTrex Vista may be hard-wired to a serial connector using the Data Cable (P/N 010-10205-00, see Appendix A for ordering information). Refer to the wiring diagram and the eTrex Vista unit data connection illustrated below.

The PC Interface Cable provided with this unit allows you to connect your eTrex Vista to a PC-compatible computer's serial port.

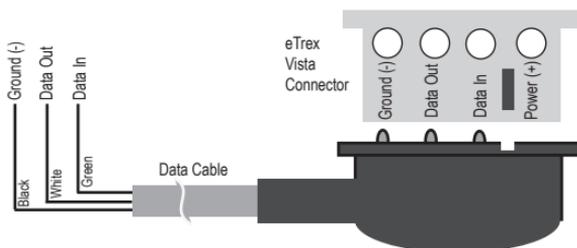

To resolve problems that cannot be remedied using this guide: Contact GARMIN Customer Service at 913-397-8200

Appendix E Troubleshooting

Symptom	Probable Cause	Remedy
Unit does not turn on.	Batteries are exhausted.	Replace batteries.
Unit will not turn ON, even with new batteries.	Batteries may be installed backwards. You are pressing and <u>releasing</u> the POWER button.	Reinstall batteries. You must press and <u>hold</u> the POWER button for two seconds.
The unit turns On, then turns Off.	Batteries may be nearly exhausted.	Replace batteries.
It takes more than ten minutes to get a location fix.	The unit's view of satellites is obstructed.	Move to a location with a clear view of the sky.
Cannot access a WAAS system satellite after 2 to 5 minutes.	Your view of the satellite is obstructed or you are located too far from satellites currently in service for the Americas. <i>(Above the equator, one over the Atlantic Ocean and one over the Pacific Ocean)</i>	Move to a location with a clear view and point the unit antenna in the direction of the satellite.
Cannot obtain a differential position from WAAS.	You have not collected enough information from the WAAS satellite.	Wait 10-20 minutes for the initial collection, then 1-2 minutes afterwards.
Cannot access Point of Interest, Street, or Intersection Find Lists.	MetroGuide map data is not activated.	Access the Map Setup 'Map' option and activate the check box.
Cannot view a track being laid down on the map page when traveling.	The Track Log feature is turned Off.	Access the Tracks Page, highlight the 'ON' button and press in on the CLICK STICK .
Cannot see the panning arrow on the Map Page easily.	There is too much map clutter or the scale is such that map features are so densely displayed the arrow is difficult to view.	Use the Map Page Setup Page to reduce map clutter or change the map scale.
Cannot exit a menu or page by moving the CLICK STICK to the left.	Some menus and pages have an 'X' Exit on-screen button in the upper right corner.	Highlight the on-screen button and then press in on the CLICK STICK to exit.

The eTrex Vista is programmed to provide "pop-up" messages concerning operational characteristics and conditions. Press in on the **CLICK STICK** to acknowledge a message and return to the current feature.

Appendix F Index

- A**
- Accessories..... 63
 - Activate a Route 49
 - Altimeter Calibration..... 30
 - Altitude 8, 28
 - Altitude Entry..... 30
 - Antenna 2,3
 - Arrow, Panning..... 18, 20
 - Auto Compass Switch Setup..... 55
 - AutoZoom..... 23
 - Average Speed 22, 27
- B**
- Backlight Timer 4, 55
 - Backlighting On/Off 2, 4, 55
 - Battery Installation/Replacement 3
 - Battery Level Indicator 10, 33
 - Battery Type..... 3
 - Beacon Receiver Setup..... 56
 - Bearing..... 22, 26
 - Bearing Pointer..... 7, 253
 - Big Numbers 26, 27
- C**
- Cancel Goto 13, 44
 - Cautions..... ii-iii
 - Cities, By Name..... 39
 - Cities, Nearest 39
 - CLICK STICK..... 2
 - Compass Calibration 8
 - Compass, On/Off 2, 8
 - Compass Ring 7, 25
 - Contrast 2, 4, 55
 - Course..... 14, 22, 25
- D**
- Data Entry..... 2, 11
 - Date and Time Setup 10, 53
 - Detail, Map..... 2, 6, 17, 18, 23
 - Differential GPS (DGPS) 56, 57, 61
 - Distance 20, 21, 22, 24, 25, 27, 29
- E**
- Elevation Plots, View 29
- F**
- Estimated Time of Arrival (ETA)..... 22
 - Exit Services 40
 - Exits 40
 - Exits, Nearest 40
- F**
- Features..... 1-2
 - Fields, Data 22
 - Find Address 37, 42-43
 - Find Cities..... 37, 39
 - Find Exits..... 37, 40
 - Find Favorites 37, 38-39
 - Find Intersections..... 37, 42-43
 - Find Button 2
 - Find Menu 37
 - Find Points of Interest 37, 41-42
 - Find Waypoints..... 37, 38
- G**
- Global Positioning System (GPS)..... ii, 15
 - Goto Functions 13, 44
 - Cancelling (Stop Navigation) 13, 44
- H**
- Heading Selection..... 55
- I**
- Initialization 3, 15
 - Installing Batteries 3
 - Interface Page 56
- L**
- Location (Marking)..... 34
- M**
- Main Menu..... 10, 33
 - Main Pages 5-10
 - Main Page Menu..... 5
 - Map Datums..... 54
 - Map Display 18, 23
 - Map Page..... 6, 18
 - Map Page Options 19-24
 - Map Scale 2, 6, 18, 23
 - MapSource Map Data 4, 63
 - Mark a Waypoint..... 34
 - Mark Waypoint Page 34
 - Measuring Between Waypoints.. 20, 44, 46-47
 - Moving a Waypoint 35, 48

N

Navigation Page.....	7, 13, 25-27
Nearest (Waypoints, Cities, Exits, etc.).....	37
NMEA.....	56, 64
Normal Mode.....	57
North Up.....	15, 23
North Reference.....	55

O

Odometer.....	32
Offset (Time).....	53, 62
On-Screen Buttons.....	5
Option Menus.....	5, 13, 15, 19, 23, 28, 31, 36, 43, 48, 52
Orient Map.....	23

P

Panning (Map).....	18, 20
Page Button.....	2
Position Format.....	54
Power Button.....	2
Pressure Plots, View.....	29
Projecting a Waypoint.....	36

R

Receiver Status.....	3, 15, 57
Renaming a Saved Track.....	52
Reset Max Speed.....	32, 32
Routes.....	45-50
Creating.....	45
Naming.....	45
Options.....	45
Editing.....	46-48
Inverting.....	46

S

Satellite Page.....	3, 5, 15-16
Saving the Tracklog.....	51-52
Select a Waypoint.....	38
Selecting a Page.....	5
Serial Number (External).....	Inside Back Cover
Serial Number (Internal).....	57
Set Course.....	14, 25, 27
Sight 'N Go.....	27
Software Version (Operating).....	57
Specifications.....	61
Speed.....	22, 26, 32
Stop Navigation.....	13, 19, 21, 26, 44

Appendix F Index

Sunrise/Sunset.....	22, 26, 58
Symbol (Map).....	18, 34
System Setup.....	57

T

Time Format.....	53
Time Offset Chart.....	62
Time Zone.....	53, 62
TracBack.....	51
TracBack Navigation.....	51
Track Logs.....	51-52
Track Up.....	15, 23
Trip Computer Page.....	32
Trip Odometer.....	22, 23
Trip Time.....	32
Troubleshooting.....	65
Turning the GPS Receiver "Off".....	15

U

Unit Features.....	1-2
Units of Measure.....	54
Units Page.....	54
UTC Offset.....	53, 62

V

Vertical Speed.....	22, 26, 31
View Points, Altimeter.....	30
View Waypoints on Route.....	45, 47, 49

W

WAAS, Enable/Disable.....	57
Waypoints List.....	37-38
Waypoints.....	33-36
Deleting.....	36
Editing.....	36
Marking.....	34
Naming.....	34
Symbols.....	34
Wiring Diagram (Interface).....	64

Z

Zoom In/Out Buttons.....	2, 18
Zoom Ranges.....	29

Appendix G **GARMIN** **Limited Warranty**

GARMIN Corporation warrants this product to be free from defects in materials and workmanship for one year from the date of purchase. GARMIN will, at its sole option, repair or replace any components which fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor. The customer is, however, responsible for any transportation costs. This warranty does not cover failures due to abuse, misuse, accident or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY LIABILITY ARISING UNDER WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To obtain warranty service, call the GARMIN Customer Service department (913/397.8200) for a returned merchandise tracking number. The unit should be securely packaged with the tracking number clearly marked on the outside of the package, and sent freight prepaid and insured to a GARMIN warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs. GARMIN retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

Product Registration

Help us to better support you by completing our on-line registration today!

Have the serial number of your eTrex Vista handy and connect to our website (www.garmin.com). Look for the Product Registration link on the Home Page.

Why should you register your eTrex Vista unit?

- Notification of Product Updates
- Notification of New Products
- Lost or Stolen unit tracking

Serial Number

Use this area to record the external serial number (8-digit number located inside the battery compartment) in case it is lost, stolen, or needs service. Be sure to keep your original sales receipt in a safe place or attach a photocopy to the inside of the manual.

Serial Number:

* *



NOTE: Do not confuse this external serial number with internal serial number that is displayed in the System Setup Page. The internal serial number is relevant to the operating software and is required only when transferring certain types of GARMIN MapSource Data to your unit.



© 2001 GARMIN Corporation

GARMIN International, Inc.
1200 E 151st Street, Olathe, KS 66062 U.S.A.

GARMIN (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51, 9AQ U.K.

GARMIN Corp.
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

Part Number: 190-00219-00 Rev. A